



## Splashproof True Wireless Sports Earphones & Charging Case

Ear Shots Active

Item ref: 100.579UK

User Manual

Designed for people who stay active, our splash-proof sports earbuds with True Wireless technology are designed to stay put, come rain or shine. The materials are firm yet flexible, providing a comfortable yet stable fit even through the most intense of workouts and without the hassle of tangling wires. During downtime, the magnetic charging case keeps the earbuds fully charged and ready for your next session. The lightweight design delivers heavyweight sound, with intuitive earbud controls for volume, track selection and hands-free phone calls. Up to 4 hours playback is available from a single charge, with Bluetooth 5.0 technology providing speedy wireless connectivity within 10m range.

### Features

- True wireless technology provides impressive audio performance without the hassle of tangling wires
- Rugged design for sweat & water resistance even in the toughest conditions
- Earbud track and volume controls handle your music and phone calls with ease
- Dynamic drivers that deliver a deep immersive sound experience
- Innovative LED power status indicators on charging case lid
- Up to 4 hours of listening time from a single charge (additional 12 hours with charging case)
- Bluetooth 5.0 connectivity for optimum transmission speeds
- Instant set up on smart devices, just open the case and hold in close proximity for hassle-free connection
- iOS and Android compatible


### In the box

- 2pcs True wireless earbuds
- Wireless charging case
- USB Type-C charging cable
- User guide

### Specifications

Speaker Driver	10mmØ Neodymium
Frequency Response	20Hz -20kHz
Sensitivity	Earphones: ≥120dB
Impedance	32 Ohms
IP rating	IPX4
Power: Battery	Earphones: 2x internal 40mAh, Charging case: 500mAh
Battery Life (hours)	Earphones: 4 hours max, Charging case: Up to 12 additional hours playback
Standby Time	300 hours (approx.)
Charge Time	Earphones: 50 mins (approx), Charging case: 2 hours (approx)
Bluetooth Version	V5.0+EDR
Bluetooth Range	Up to 10m (clear line of sight)
Dimensions	Earphones: 55 x 40 x 30mm, Charging case: 75 x 75 x 40mm
Weight:	Earphones: 2x 10g, Charging case: 92g (inc headphones)

### Overview

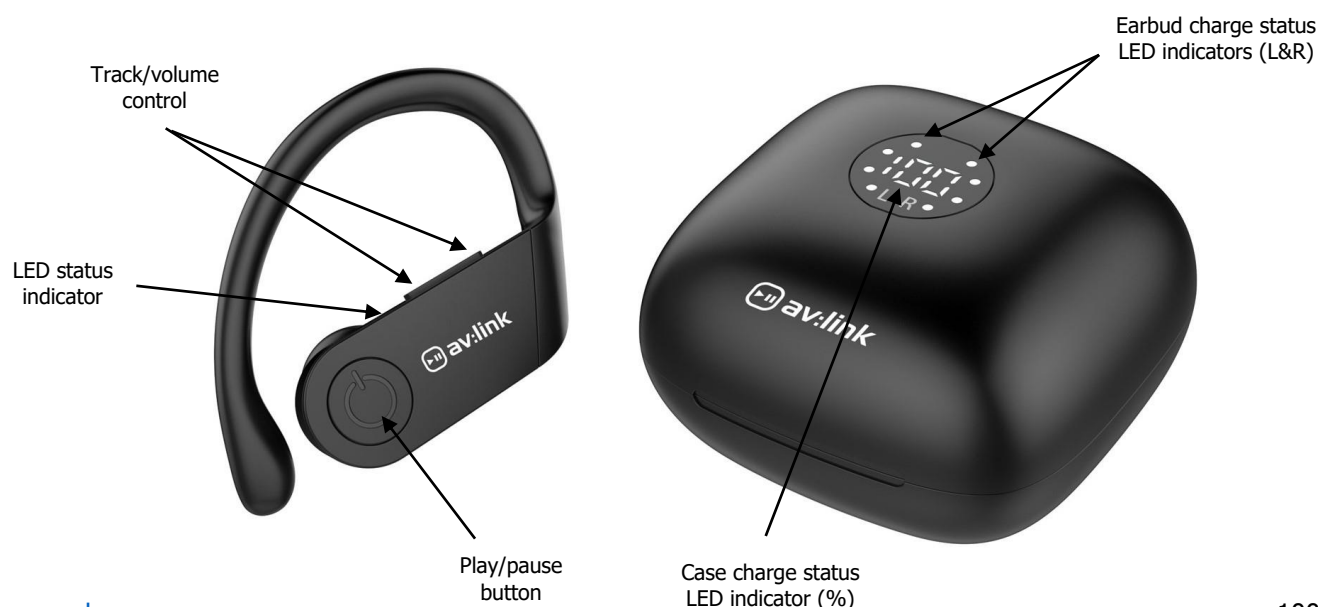

### Before first use

Even though your Ear Shots Active will come with some battery charge, it's advisable to fully charge them before first use. Connect the charging case and earbuds to a suitable USB power source using the charging cable provided and leave for around 2 hours to ensure they are ready for use. During charging, the charging case LED indicator will show the current charge status as a percentage and the second digit will flash, once the case is fully charged to 100% it will stop flashing. **NOTE:** Please remove the blue plastic shipping tab from the charging contacts on each earphone before use.

### Pairing in True Wireless mode

Ear Shots Active are fitted with an intelligent chipset that allows instant pairing on smart devices. To enter pairing mode simply open the lid of the charging case and they will appear on the Bluetooth device list of your smart device as the pairing name "**AV:LINK EAR SHOTS ACTIVE**". During pairing if your device asks you for a pairing code enter "**0000**" and click connect. Once paired you can reconnect or disconnect to your device at any time by simply opening and closing the lid on the charging case.

### Turning the earbuds on and off

To turn on the earbuds simply remove them from the charging case: remove one earbud for mono/hands-free use or both earbuds to experience stereo true wireless audio. If the earbuds ever fail to power on after removing them from the charging case, press and hold the play/pause button for 4 seconds to perform a manual switch on and the LED status indicator will illuminate blue. To switch the earbuds off after use simply return them to the charging case or for a manual switch off press and hold the play/pause button for around 4 seconds and the LED status indicator will illuminate red.

### Track and volume controls

The Ear Shots Active earbuds are fitted with both a rocker switch on the top and a push button in the centre which can be used to control the audio playback from your connected smart device. To play and pause the current track simply press the play/pause button on either earbud repeatedly. During audio playback press the "+" side of the track/volume control rocker on the top of either earbud to increase the master volume and press the "-" side to lower the master volume. To move to the next track press and hold the "+" side of the track/volume control rocker and for the previous track press and hold the "-" side. To activate your device's in-built voice assistant (Siri, Alexa etc), press and hold one of the play/pause buttons for around 3 seconds then release. You will hear a beep sound prompting you to give your voice command. You can then ask anything you want the device to do, such as tell you the weather, move to the next track, play a specific track or album or even find your way home using maps. **NOTE:** This function is only available on compatible Apple and Android devices, check your device's handbook for more details.

### Hands-free operation

When you receive a phone call during audio playback, a ringtone can be heard in the earbuds. To accept the call, press the play/pause button on either earbud or to reject the call press and hold the play/pause button. When you have completed the call, hang up by pressing the play/pause button on either earbud again. Finally, to redial the last outgoing call made on the connected smart device press the play/pause button twice.

### Charging the earbuds and case

To charge the earbuds, carefully place them in the corresponding magnetic ports of the charging case and close the lid. During charging the LED status indicators on the lid will flash to show how much charge is in each earbud. There are 4 LED's for each side (L&R), and each LED represents 25% charge (i.e 3 LED's on the Left side means the left earbud has 75% charge). It usually takes around 50 mins to fully charge the earbuds from 'flat', and once both the earbuds are full (4 LED's lit) the case will automatically end the charging process and the charging LED panel will go out. The charging case is a compact, magnetic carry case and power bank, with capacity to fully recharge the earbuds up to 3 times. To charge the charging case connect it to a compatible USB power socket using the charging cable provided, the charging case LED indicator will then show the current charge status as a percentage and the second digit will flash, once the case is fully charged to 100% it will stop flashing.

### FAQ

**Q)** The Ear Shots Active will not pair with my device. **A)** Check that the earphones are in pairing mode; Bluetooth is enabled on your device; and the device is set as 'discoverable'.

**Q)** The Ear Shots Active disconnect with my device within the stated 10m transmission distance. **A)** The maximum transmission distance stated is dependent on a clear line of sight between the earphones and your device. If there are large metallic objects or other devices transmitting radio or wireless signals in the vicinity, they may impact on the reception of the earphones.

**Q)** The Ear Shots Active won't reconnect with my device. **A)** On occasion, your Bluetooth device or the earphones may enter a locked state and need resetting. To do this, find the earphones in your device list and select "forget this device". Then, follow the instructions for "**Pairing in True Wireless Mode**" above.

### Safety Disclaimer



Do not attempt to service this product yourself as opening or removing covers may result in fire, electric shock or equipment damage and will also invalidate the warranty. This product is only designed for indoor use and must be kept away from water and high humidity along with high temperatures and direct sunlight. Prolonged listening at high volumes can cause hearing damage. Keep away from young children as small parts can be a choking hazard.



This product is classed as Electrical or Electronic equipment and should not be disposed with other household or commercial waste at the end of its useful life. The goods must be disposed of according to your local council guidelines.

Hereby, AVSL Group Ltd. declares that the radio equipment type: 100.579UK complies with Directive 2014/53/EU  
The full text of the EU declaration of conformity for 100.579UK is available at the following internet address: [www.avsl.com/assets/doc/1/0/100579UK.pdf](http://www.avsl.com/assets/doc/1/0/100579UK.pdf)

### Errors and omissions excepted.

Copyright© 2021 AVSL Group Ltd, Unit 2 Bridgewater Park,  
Taylor Road, Trafford Park, Manchester. M41 7JQ.

[www.avsl.com](http://www.avsl.com)

AVSL (Europe) Ltd, Unit 3D North Point House,  
North Point Bus. Park, New Mallow Road, Cork, Ireland.

100.579UK