


WPS01-BT

Water Resistant Portable Mini Bluetooth™ Speaker


Item ref: 100.600UK – Black
100.601UK – White

User Manual

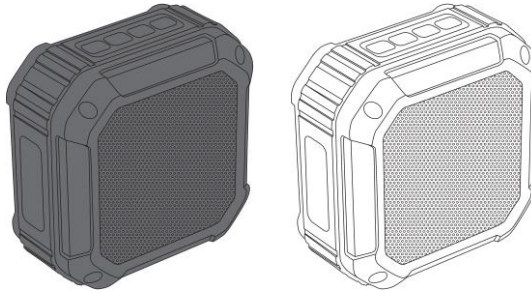

Take your music anywhere with this rechargeable mini speaker. Great for use outdoors or in the shower. Features Bluetooth connectivity, water resistant housing, Aux in, built-in microphone and 6 hours battery life with excellent audio reproduction.

- Super bass speaker output
- Answer calls with built-in microphone
- Water resistant, perfect for use in the shower or outdoors
- Aux in
- Built-in rechargeable battery for up to 6 hours playback when fully charged
- Supplied with 0.8m USB charger lead and 0.8m 3.5mm jack to jack audio lead

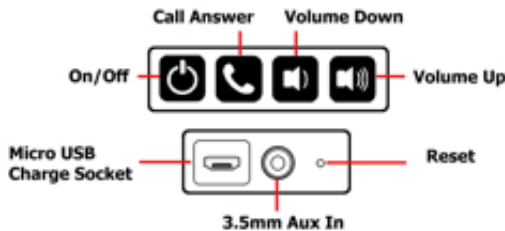

On/Off:

To switch speaker on, press and hold the on/off button and you will hear a short beep to indicate the unit on. LED will also flash blue indicate it is waiting for Bluetooth connection. To switch unit off, press and hold the on/off button again and you will hear a long beep to confirm the speaker is switched off.

Aux in:

For playback via Aux in, simply open the socket cover and connect the audio device and speaker using a 3.5mm jack lead. Please note the Bluetooth function will be disabled when

Aux in is connected. Having the socket cover open will compromise the water resistance values so please avoid splashes to the unit when connected in this way.

Bluetooth connection:

To connect via Bluetooth, first of all ensure Aux in is not in use and enable the Bluetooth function of your audio device. Search Bluetooth "av:link" and pair. The speaker will make a short beep the blue LED will remain lit when successfully connected. Please refer to your audio device manual regarding detailed procedure on how to pair your Bluetooth device.

Incoming calls:

When the speaker is connected to a mobile phone via Bluetooth, you can answer incoming phone calls by pressing the phone button. The speaker will notify you with a tone melody when there is an income call. A microphone is located at the front of the speaker; please ensure it is facing you in order for the mic to pick up your voice properly.

Low power/charging:

When the battery power is low, the speaker make 3 short beeps the blue LED will flash. To recharge the unit, open the connector cover on the side of the speaker and connect the USB charger lead to the speaker and to a power source. The red LED will remain lit to indicate the device is charging.

Reset:

To reset the speaker use a sharp object to press through the reset button located next to the Aux in socket.

Troubleshooting

No output	Check speaker is switched on & has power
	Check volume on speaker and device are turned up
	Check condition of the connection lead if connected via jack lead
Cannot connect to Bluetooth	Check Bluetooth is enabled from your device
	Check aux in is not connected
	Check speaker is within 10m radius of the device
Disruptive output	Check speaker is not next to a wireless router
	Check volume is not set too loud on both speaker and device
	Check speaker is not too far from the device
	Check condition of the connection lead if connected via jack lead
Cannot charge	Check mains is switch on
	If charge through Laptop/PC, please ensure the powered USB port is being used



This product is classed as Electrical or Electronic equipment and should not be disposed with other household or commercial waste at the end of its useful life. The goods must be disposed of according to your local council guidelines.