



## 2.0 Channel 40W Bluetooth® Soundbar

AV-SB40

Item ref: 120.100UK

User Manual


A compact yet powerful Bluetooth soundbar with sleek looks and excellent audio response. 4 inbuilt speakers and 2 passive radiators provide clarity across a broad frequency range, with crisp highs and deep bass that belie the unit's size. An integral USB port enables playback of MP3/WMA files directly from compatible media, with further flexible input options including line in, aux and Bluetooth. A convenient and cost-effective TV audio upgrade that doesn't compromise on performance.

- Slender and stylish gloss black design
- 6 speakers for crisp, clear sound with deep bass
- Inbuilt 2.0 channel amplifier with 6 EQ presets
- Versatile input options to support a range of devices
- USB port for MP3 and WMA media playback
- Keyhole slots for wall mounting
- Remote control and audio connection leads included

### Technical Specifications and Features

Audio output	40W RMS
Speaker drivers	4 x 2" 10W units and 2 x bass diaphragm units
Frequency	50Hz~16KHz
Sensitivity	>=80dB
Bluetooth version	4.2+EDR
Bluetooth range	Up to 10m
Connections	Bluetooth, USB 2.0, Line in (3.5mm), AUX (3.5mm)
Power supply	18V 2.0A
Dimensions	940 x 60 x 66mm
Weight	1.49Kg

### Connections

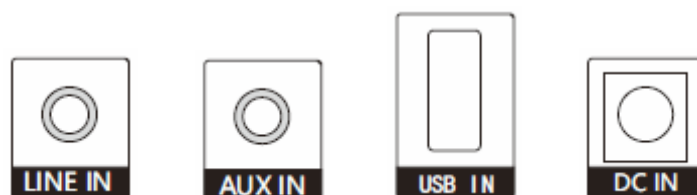

1. **LINE IN:** Use to connect compatible devices using the 3.5mm – 3.5mm stereo jack cable provided.
2. **AUX IN:** Use to connect compatible devices using the 3.5mm stereo jack – twin RCA cable provided.
3. **USB IN:** Use to connect a flash drive for direct MP3/WMA playback (FAT32 format and 32GB max).
4. **DC IN:** Use to connect the UK power supply.

### LED display

1. **Red LED:** Standby mode
2. **LINE:** Line in mode
3. **bt:** Bluetooth mode
4. **USB:** USB media mode
5. **AUX:** Auxiliary input mode

## Remote Control



## Input Functions

- **Power on/off:** Press the **Power on/off** button on the remote control or soundbar control panel to turn the unit on and off.
- **Line in:** Connect a compatible device using the 3.5mm – 3.5mm stereo jack cable provided, then press the **MODE** button on the remote control or soundbar control panel repeatedly until **LINE** is shown on the LED display. Ensure the connected device is producing an audio signal, then adjust the volume using the **Volume up** and **Volume down** buttons on the remote control or soundbar control panel.
- **AUX in:** Connect a compatible device using the 3.5mm stereo jack – twin RCA cable provided, then press the **MODE** button on the remote control or soundbar control panel repeatedly until **AUX** is displayed on the LED display. Ensure the connected device is producing an audio signal, then adjust the volume using the **Volume up** and **Volume down** buttons on the remote control or soundbar control panel.
- **Bluetooth:** Press the **MODE** button on the remote control or soundbar control panel repeatedly until **bt** is shown on the LED display. The LED display will flash to indicate that the soundbar is in Bluetooth pairing mode. Ensure that the device you wish to connect is also in pairing mode and search for **AV:LINK-SB40** in its device list. When the two devices are paired, the LED display on the soundbar will stop flashing and remain constant. (The soundbar will now automatically re-pair with this device whenever it is within range and has Bluetooth turned on.) Once paired, the remote control can be used to play, pause and navigate between tracks on compatible iOS and Android devices.
- **USB media mode:** The soundbar is compatible with USB flash drives of up to 32GB in size and can play MP3 and WMA audio files directly. Simply insert a compatible drive into the USB port on the back of the soundbar and the unit will automatically switch to **USB** mode and play the first compatible track. The media controls on the remote control can be used to play, pause and navigate between tracks on the flash drive, and the LED display will indicate the current track time.

**USB repeat mode** (also accessed via the remote control) enables single track repeat (**ONE**), all track repeat (**ALL**), random track playback (**rAn**), and folder repeat (**Fold**). Repeatedly press the **USB repeat mode** button to scroll between these options.

The media player also has a memory function that will recall and continue from the last-played point when a USB flash drive that has previously been used with the soundbar is reinserted.

- **Equalizer modes:** The soundbar has 6 equalizer presets, tailored to complement various styles of music. Press the **EQ** button on the remote to choose between Normal (**EQ1**), Rock (**EQ2**), Pop (**EQ3**), Classic (**EQ4**), Jazz (**EQ5**) and Country (**EQ6**).
- **Wall mounting:** The soundbar has two keyhole slots on the back to enable wall mounting, using the fixings provided or a compatible soundbar bracket (not supplied).

## FAQ

**Q)** Why won't my Bluetooth device connect to the soundbar? **A)** The soundbar may not be in pairing mode, or the Bluetooth device may not be set as 'discoverable'. Check these settings, then try again.

**Q)** Why won't the soundbar play the media on my flash drive? **A)** The soundbar is only compatible with MP3 and WMA audio files, stored on flash drives of up to 32GB in FAT32 format.

**Q)** Why is there no sound? **A)** The volume level on the soundbar or connected device may be turned down, or the audio cable may have become disconnected.

**Q)** Why does the soundbar disconnect from my Bluetooth device within the stated 10m transmission distance? **A)** Large metallic objects or other devices transmitting radio or wireless signals can impact on the reception of the soundbar. To attain the maximum transmission distance, ensure there is a clear line of sight between the soundbar and the Bluetooth device.

## In the box

- |  |   |
|--|---|
| 1. Bluetooth soundbar                        | 5. 3.5mm – 3.5mm stereo jack cable (1.5m) |
| 2. UK power supply                           | 6. Wall mounting kit                      |
| 3. Remote control                            | 7. User manual                            |
| 4. 3.5mm stereo jack – twin RCA cable (1.5m) |   |

## Warning

- For reasons of electrical safety, this device must never be immersed in water, exposed to damp conditions or excessive force.
- Do not use this device if you find that it is damaged in any way.
- Only use the power supply provided by the manufacturer.
- When not in use for long periods, disconnect the power supply from the mains.
- Do not attempt to repair this device or take apart under any circumstances, as this will invalidate your warranty.



This product is classed as Electrical or Electronic equipment and should not be disposed with other household or commercial waste at the end of its useful life. The goods must be disposed of according to your local council guidelines.

*Errors and omissions excepted.  
Copyright© 2017. AVSL Group Ltd.*