



Amplified Paper-thin Transparent HDTV Aerial

Order ref: 120.520UK

User Manual

A lightweight, paper-thin amplified aerial ideal to be fixed to a window or an outside facing wall, capable of receiving Digital Terrestrial TV and DAB/FM radio signals. The easy to conceal, transparent design means the aerial won't restrict your view. It comes with an extra-long 3m RF (Coaxial) lead and additional mains powered amplifier for areas with poor signal strength or situated away from the broadcast tower.

Specification:


Gain	25dB Max
Frequency range	VHF: 47-230MHz, UHF: 470-790MHz
Impedance	75Ω
Dimensions	228 x 128 x 0.5mm
Weight	185g (with PSU)

Features:


- Lightweight, paper-thin aerial that can be fixed either to a window or an outside facing wall.
- Compatible with Digital Terrestrial TV and DAB/FM radio signals.
- Easy to conceal, transparent design.
- Supplied with extra-long 3m RF (Coaxial) lead, additional mains powered amplifier, self-adhesive pad and window suckers.

Connection and operation:

[Fig.1] Directly connected to TV

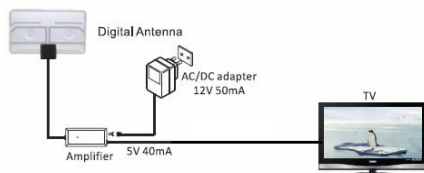

[Fig.2] Directly connected to terrestrial set-top box

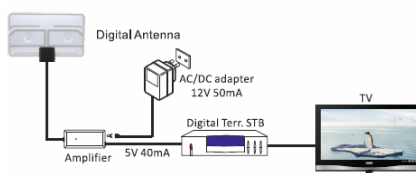

1. Connect the aerial lead either directly to the back of your Digital TV [Fig.1] or Terrestrial STB [Fig.2] and your mains power supply as shown in the above.
2. Next position the aerial in your desired location using either the self-adhesive pad or window suckers supplied.
3. For the best reception try and position as high as possible on an outside facing wall or window, away from large power consuming devices such as air-conditioning units, elevators, microwave ovens, hair dryers etc.
4. Finally run the channel scan operation on your TV or STB Setup and once complete test the quality of the channels. It may be necessary to reposition the aerial and try again if the signal quality is low, you are receiving interference or missing channels.

Safety warnings:

- Do not use this appliance if it is damaged in any way.
- For reasons of electrical safety this appliance must never be immersed in water or subjected to excessive forces.
- Do not attempt to repair this appliance or take apart under any circumstances, as this will invalidate your warranty.
- Do not use this appliance for anything other than its intended purpose, and do not use outdoors.
- Use only a damp cloth to clean the surface of the appliance, avoid water going inside the appliance and dry the appliance thoroughly before usage. Never attempt to clean while it is on or still hot.
- Please ensure you have read these instructions thoroughly before first use and keep them for future reference.



This product is classed as Electrical or Electronic equipment and should not be disposed with other household or commercial waste at the end of its useful life. The goods must be disposed of according to your local council guidelines.

Errors and omissions excepted.

Copyright© 2021 AVSL Group Ltd, Unit 2 Bridgewater Park,
Taylor Road, Trafford Park, Manchester. M41 7JQ.

www.avsl.com

AVSL (Europe) Ltd, Unit 3D North Point House,
North Point Bus. Park, New Mallow Road, Cork, Ireland.

120.520UK User Manual