



Rugged Universal TV Remote Control

Item ref: 149.507UK

User Manual

This universal remote control is made of tough, splashproof and wipe clean materials, making it ideal for use in places where sterility is important such as hospitals, schools and hotels. Instantly compatible out of the box with most models of Samsung, LG and Sony TVs, this innovative remote control can also be programmed for use with many other brands and provides instant control to most of your TV's modes and functions. Powered by 2x AAA batteries (not supplied) this rugged remote is ideal for many home and business applications.

Features:

- Designed for sterile environments such as hospitals, schools and hotels.
- Works out of the box for LG, Samsung and Sony TV's and can be programmed for many other brands.
- Ideal to replace lost or broken remote controls.
- Operates most major controls and functions.
- Uses 2x AAA batteries (not supplied).
- NOTE: may not work with some models of smart TV.

Instructions for use:

Before use, insert two AAA batteries observing the polarity markings inside the battery compartment. Secure the battery cover with the small screw taped to the inside if required.

There are 4 methods of configuring this remote control with your TV as listed below:

1. Instant use on LG, Samsung and Sony TV's

This remote control is pre-programmed to work with LG, Samsung and Sony TV's straight out of the box and requires no additional programming by the user for most models from these brands.

2. Manual code search

Example: Setting up the remote control by manually searching for your TV brand code.

- Switch your television on (i.e. not on standby) and aim the remote control towards it.
- Press the "SET" and "POWER" buttons together and the LED indicator will illuminate red.
- Now press the "VOL+" button to move up or "VOL-" button to move down the code list stored in the remote control's memory.
- When you see the volume symbol appear on your TV you have found a compatible code.
- Try some other buttons on the remote control to ensure the code is completely correct for your TV.
- If you are happy that the current code is fully compatible with your TV press the "SET" button again to store the code.
- If only some of the buttons work, repeat the process again to find a more compatible code.

3. Auto code search

Example: Setting up the remote control using automatic searching for your TV brand code.

- Switch your television on (i.e. not on standby) and aim the remote control towards it.
- Press and hold the "SET" button on the remote control until the LED indicator illuminates then begins to flash.
- The remote control is now in automatic searching mode and will try a new code on every flash of the LED indicator.

- When you see the volume symbol appear on your TV you have found a compatible code and need to release the "SET" button immediately.
- Try some other buttons on the remote control to ensure the code is completely correct for your TV.
- If you are happy that the current code is fully compatible with your TV press the "SET" button again to store the code.
- If only some of the buttons work, repeat the process again to find a more compatible code.

4. Direct brand setting

Example: Setting up the remote control using the corresponding button for popular brands.

- Switch your television on (i.e. not on standby) and aim the remote control towards it.
- Find your brand in the list below and identify the corresponding brand button (eg. Sharp is button "1" and Haier is the "TV" button).
- Press and hold the correct button for your brand until the LED indicator illuminates then begins to flash.
- When you see the volume symbol appear on your TV release the button immediately to store the current code.

| Brand | Brand button | Brand | Brand button |
|------------------|--------------|---------------------|--------------|
| Akira | P.MODE | Other brands | SOURCE |
| AOC | S.MODE | Panasonic | 3 |
| BBK | ASPECT | Philips | 7 |
| Changhong | REVERSE | Prima | YOUTUBE |
| Daewoo | YELLOW DOT | Samsung | 9 |
| Elenbreg | SLEEP | Sanyo | 4 |
| Haier | TV | Sharp | 1 |
| Hisense | -/-- | Skyworth | 0 |
| Hitachi | 5 | Sony | 2 |
| JVC | BLUE DOT | Supra | MENU |
| Konka | RED DOT | TCL | NETFLIX |
| LG | 8 | Thomson | GREEN DOT |
| Openbox | SMART | Toshiba | 6 |

PLEASE NOTE: to reset the remote control to factory default settings and clear any stored codes, press the "SET" and "0" buttons simultaneously until the LED indicator flashes twice.

Warning:

- For reasons of electrical safety this device must never be immersed in water, exposed to damp conditions or excessive force.
- Please do not use this device if you find that it is damaged in any way and only use the batteries recommended by the manufacturer.
- Do not attempt to repair this device or take apart under any circumstances, as this will invalidate your warranty.



This product is classed as Electrical or Electronic equipment and should not be disposed with other household or commercial waste at the end of its useful life. The goods must be disposed of according to your local council guidelines.

Errors and omissions excepted.

Copyright© 2024 AVSL Group Ltd, Unit 2 Bridgewater Park,
Taylor Road, Trafford Park, Manchester. M41 7JQ.

AVSL (Europe) Ltd, Unit 3D North Point House,
North Point Bus. Park, New Mallow Road, Cork, Ireland.