

# LED FIREBALL

Party Light

Item ref: 151.731UK, 151.732UK

User Manual



Caution: Please read this manual carefully before operating  
Damage caused by misuse is not covered by the warranty

1. Before turning the power on check the units are in good condition. If damaged do not plug the units in to the mains. If the unit is not functioning correctly return to your retailer and do not attempt to repair yourself as there are no user serviceable parts inside.
2. Use indoors only
3. Connect the assembly to an earthed wall outlet.
4. Check the unit regularly to ensure it has incurred no damage and is still in fully working order.
5. Do not stare directly to the light as long exposure can result in serious injury to your eyes.
6. If the unit has not been used for a longer period of time, condensation can occur inside the housing. Please let the unit reach room temperature prior to use.
7. Keep out of reach of Children

## Specifications

Power supply	12Vac, 1250mA
Revolutions per minute	6rpm
Dimensions	215 x 215 x 175mm
Weight	1.1kg



**Disposal:** The "Crossed Wheelie Bin" symbol on the product means that the product is classed as Electrical or Electronic equipment and should not be disposed with other household or commercial waste at the end of its useful life. The goods must be disposed of according to your local council guidelines.

*Errors and omissions excepted.  
Copyright© 2013. AVSL Group Ltd.*