

FC4

Item ref: 154.001UK

Desktop / Foot Controller







Caution: Please read this manual carefully before operating Damage caused by misuse is not covered by the warranty

Introduction

Thank you for choosing the FC4 controller for your effect lighting setup. This desktop or floor mounted controller is specifically designed to operate QTX SmartLIGHT RGBW and RGBWAV fixtures. Please read this manual to achieve the best results from your product.

Unpacking

Your FC4 controller should reach you in good condition, supplied with an RJ45 connection lead. If there is any damage or items missing from the packaging, contact your dealer immediately.

Warning

To prevent risk of fire or electric shock, do not expose electrical parts to rain or moisture. If any liquids are spilled on the housing, allow it to dry out and have checked by qualified personnel. Avoid any impact, dropping or extreme pressure to the housing.

No user serviceable parts inside - do not open the case. Refer all servicing to qualified service personnel.

Placement

- The FC4 can be used on the floor as a foot controller or on a desktop, pressing the pads by hand
- Ensure that the FC4 is positioned on a flat stable surface with adequate clearance for the RJ45 cable

Cleaning


- Use a soft dry or slightly damp to clean the housing
- Do not use solvents

Setting up

The FC4 is powered directly from the RJ45 connector of a QTX SmartLIGHT unit. This lead (supplied with the FC4) also carries the control signal back to the SmartLIGHT unit.

Up to 32 units can be controlled together from the FC4.


After connecting the first SmartLIGHT fixture to the FC4, connect XLR leads from the DMX OUT connector to the DMX IN of the next fixture and then from DMX OUT to DMX IN of the third fixture and so on to connect all SmartLIGHT units in a chain, as shown below.

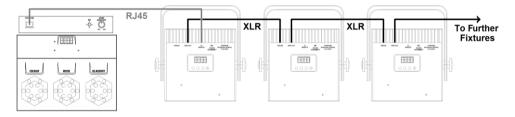

For SL-H7 and SL-H12 six-colour units, set the DMX address on each fixture to "A001" For SL-36, SL-64, SL-Q8 and SL-Q12 quad colour units, set the DMX address on each fixture to "A011" This will ensure that the correct RGBW or RGBWAV instructions are sent to the appropriate fixtures.



Operation

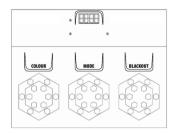

The FC4 controller features a minimalist design for ease of use. Once connected to the first SmartLIGHT in line and with the SmartLIGHT powered up, the FC4 should remember the previous selection.

If there is no light output, the last selection may have been "BLACKOUT" Press the "BLACKOUT" pad and the fixture(s) will light to the last setting.

The LED display on the FC4 will show the current control status.

Whilst in BLACKOUT mode, pressing either of the other 2 pads will cause the display to flash with a new mode or colour setting. When BLACKOUT is pressed, the light control will resume to this new selection.

Modes

The centre pad is labelled "MODE" for accessing internal programs. Repeated pressing of this pad will cycle through the modes, as follows.

Auto modes

Aut I	Colour jump cycling through 15 colours	
Ant5	Colour scroll through deep colours	
Aut3	Colour scroll through pastel colours	
Aut4	Colour fade in / fade out	

Sound activated modes

Sou I	Sound activated colour jump every beat	
50u2	Sound activated colour jump alternate beats	
5tro	Sound activated white strobe	
PUL5	Sound activated pulse with fade out	

For sound activated modes, there is an internal microphone at the rear of the FC4, which can be adjusted using a screwdriver to turn the "SOUND SENSITIVITY" control between MIN and MAX sensitivity.



Colours

The leftmost pad on the FC4 is labelled "COLOUR" for static colour selection. Pressing this pad will select one of 15 preset colours, as follows.

rEd	Red
9rEn	Green
PLUE	Blue
UHI E	White
ЯпьЕ	Amber
UI oL	Violet
YELL	Yellow
TA9E	Magenta

UArii	Warm White
orAn	Orange
PI nH	Pink
Eiler	Emerald
AUPA	Aqua
PERC	Peach
CooL	Cool White

When not in use, power down the SmartLIGHT units and disconnect the RJ45 cable if storing the FC4.

Specifications

Connection	8P8C modular plug (RJ45)
Controls	Colour, Mode, Blackout, Sound Sens.
Dimensions	230 x 175 x 45mm
Weight	950g

Troubleshooting

No nower / light	Check connection to a compatible QTX SmartLIGHT unit using the RJ45 cable
No power / light output	Ensure that the SmartLIGHT unit is powered up
output	Press BLACKOUT pad to check if blackout mode is enabled
To assume at DMV	Check RJ45 lead and connectors and XLR leads between fixtures
Incorrect DMX behaviour	Ensure that RGBW (quad colour) units are set to DMX address "A011"
Dellavioui	Ensure that RGBWAV (6-colour) units are set to DMX address "A001"



Disposal: The "Crossed Wheelie Bin" symbol on the product means that the product is classed as Electrical or Electronic equipment and should not be disposed with other household or commercial waste at the end of its useful life. The goods must be disposed of according to your local council guidelines.

Errors and omissions excepted. Copyright© 2015. AVSL Group Ltd