



Item ref: 169.030UK

D-MAT Electronic Drum Kit

User Manual



Version 1.0


Introduction

Thank you for choosing the D-MAT for drum playing and practice anywhere. Please read and keep this manual for future reference.

Setup and Connections

Position the D-MAT onto a solid and stable surface, such as a table or worktop, placing the foot pedals under each foot on the floor. Playing is possible when standing but more convenient if seated.

The D-MAT can be powered from a laptop or USB power supply via the USB lead provided. Connect this to the micro USB socket (2)

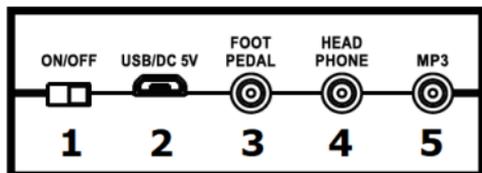


The D-MAT is supplied with foot pedals for remote Bass Drum triggering and Hi-Hat open/closed operation. These are joined to a 3.5mm jack lead which should be connected to the FOOT PEDAL socket (3)

If a smart phone or mp3 player are to be used for playback tracks to practice to, this can be connected to the stereo 3.5mm MP3 jack input (5). A 3.5mm lead is supplied for this purpose.

If stereo headphones are to be used for silent practice, these can be connected to the 3.5mm HEADPHONE jack (4)


When all connections are made, power up the D-MAT by sliding the power switch (1) to the "ON" position.

Control Panel

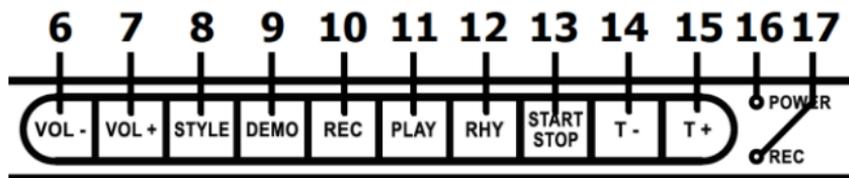

6	Volume down	12	Play accompaniment
7	Volume up	13	Start/Stop playback
8	Drum kit style (7 types)	14	Tempo down
9	Play demo songs	15	Tempo up
10	Press to record	16	Power LED
11	Play back recording	17	Record LED

Pads Layout

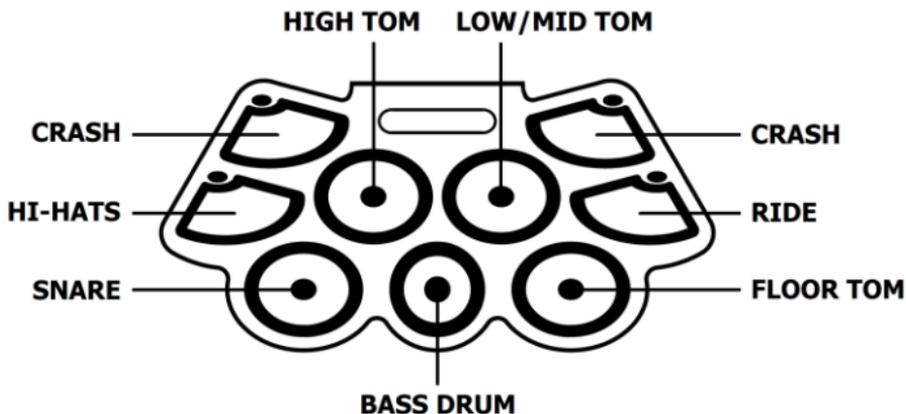

Operation

Using the drum sticks provided, once powered up, the pads on the D-MAT can be struck or hit to produce the specific sound. The output level is controlled by the VOL+/- buttons (6, 7).

2 foot pedals supplied with the D-MAT allow remote triggering of the bass drum sound and opening or closing of the hi-hats (in a real drum kit, these are 2 cymbals which close together for a short sound or open up for a longer ringing sound, operated by a pedal)

The foot pedals should be connected to the FOOT PEDAL jack. Press each pedal to check which is the bass drum and place this under the right foot. Place the hi-hat pedal under the left foot.

Press the bass drum pedal momentarily to trigger the bass drum.

Press the hi-hat pedal to make the hi-hats close. Holding the hi-hat pedal closed will mean that each hit on the hi-hat pad will produce the closed sound. Releasing the pedal and hitting the hi-hat pad will produce the longer ringing hi-hat sound.

The overall sound set may be changed by pressing the STYLE button (8). There are 7 different drum kits to choose from.

To demonstrate the full capabilities of the D-MAT, there are 12 internal demo songs which can be selected by pressing the DEMO button (9). Repeated presses of this button will step through each demo song and pressing START/STOP (13) will stop the playback.

For practice, it is also possible to record a pattern on the D-MAT and then play the recording back.

Press the REC button (10) and the Record LED will light. At this time, any hits on the D-MAT pads will be recorded to memory.

Press START/STOP (13) to finish recording and press PLAY (11) to play back the recording.

Recording another pattern will over-write the previous recording.

The D-MAT also has 9 built-in accompaniments to play along with. Press the RHY button to access these and use the START/STOP to start or stop playback.

To change the speed or tempo of playback, press the T- or T+ buttons until the correct tempo is achieved.

When connected to a laptop or other computer with MIDI software installed, the D-MAT can be used as a MIDI controller to trigger sounds within the MIDI software. For this function, it is necessary to use a USB to micro USB lead which can carry data, as supplied with the D-MAT for power (not just a charging lead)

Check for USB audio device or MIDI device in the input section of the software. The D-MAT is plug & play and switching the D-MAT on or off will show if it is in the available devices. Select this USB device and use it to trigger sounds within the software.

Note: The D-MAT will enter sleep mode after 1 minute of inactivity

Specifications

Power supply	5Vdc USB (lead included)
USB interface	USB micro for MIDI output to PC/Mac
Trigger	5 x drums, 4 x cymbals, 2 x foot pedals
Auxiliary input	3.5mm stereo jack (for mp3/CD)
Headphone out	3.5mm stereo jack
Internal programs	7 x styles (drum kit sound sets)
Controls	Vol+/-, Style, Demo, Rec, Play, Rhy, Start/Stop, 1-, 1+
PC/Mac compatibility	Windows PC 7, 8, Vista, XP, 10 Mac OSX
Dimensions	470 x 295 x 60mm
Weight	830g



Disposal: The "Crossed Wheelie Bin" symbol on the product means that the product is classed as Electrical or Electronic equipment and should not be disposed with other household or commercial waste at the end of its useful life. The goods must be disposed of according to your local council guidelines.

*Errors and omissions excepted.
Copyright© 2018. AVSL Group Ltd.*