



# **CPT-01**


## Chromatic Tuner Pedal

Item ref: 174.244UK



## User Manual

## Features & Functions

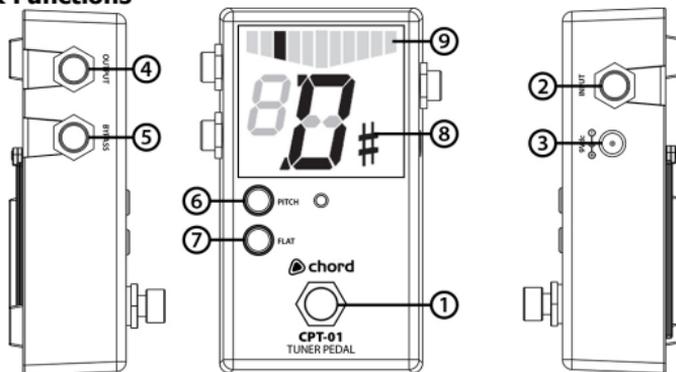

1. On/off foot switch.
2. Input 6.3mm mono jack connector.
3. 9Vdc input for optional mains adaptor.
4. Output socket. Connect 6.3mm mono jack connector to amp or another effect unit (muted when tuning).
5. Bypass socket. Connect 6.3mm mono jack connector to amp or another effect unit (active when tuning).
6. Pitch button to change the reference frequency.  
0~5: 440~445Hz, 6~9: 436~439Hz
7. Flat button to use flat tunings.  
 $B$   $_$  =b    $_{\#}$  =bb    $_{\#}$  =bbb
8. Note display.
9. Note accuracy indication.

Please note: Connecting to the input jack enables the battery. Please disconnect when not in use to preserve the battery.

Before connecting to an instrument, ensure the amplifier volume is turned down.

Power supply	9Vdc (battery or optional mains adaptor)
Tuning range	27.5Hz to 4186Hz (A0 to C8)
Notes	A, A#, B, C, C#, D, D#, E, F, F#, G, G#
Accuracy	±1 cent
Pitch shift	436 – 445Hz
Dimensions	75 x 44 x 51mm
Weight	300g (incl. battery)

*Errors and omissions excepted.*  
 Copyright© 2015. AVSL Group Ltd.