



Recharge: 10W Wireless Charging Digital Alarm Clock

Black: 421.785UK, White: 421.786UK

User Manual


Start the day fully charged and ready to go. This versatile alarm clock is the perfect fit for bedside tables, with clear LED display and a sleek, contemporary design. You can also wirelessly charge your compatible devices, just place your device on the alarm clock and wake up to a full battery without the need for additional wires.

- Stylish and modern design with easy to read white LED clock display
- Supports fast charging for Samsung 10W and iPhone 7.5W (fast charge mains adaptor required)
- 5W Universal Qi certified charging mode for other devices
- 12-hour and 24-hour, 3-function alarm clock
- Thermometer displaying current room temperature
- Available in attractive black and white satin finishes

Technical Specification:

Input	5V 1.5A, 9V 1.67A
Output	5W, 7.5W, 10W
Dimensions	160 x 75 x 40mm
Weight	230g

Controls Diagram:

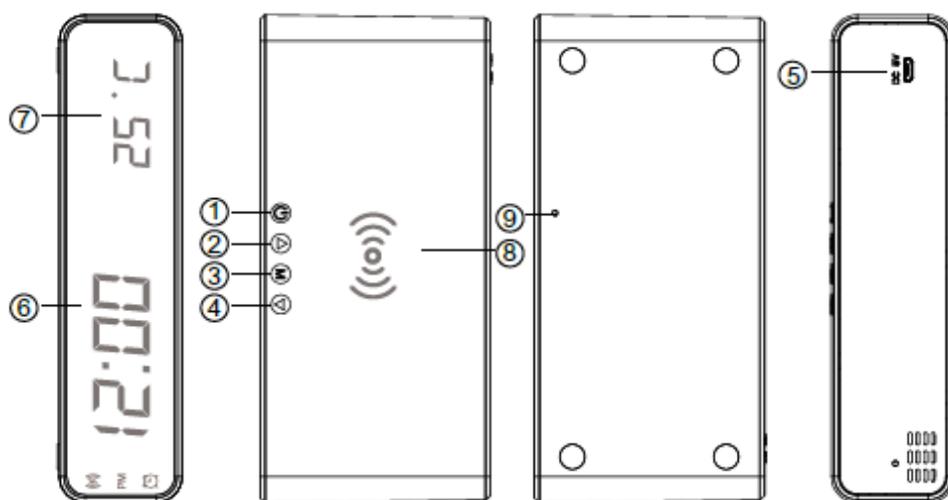

1. Display on/off button
2. Up adjust button
3. Menu button
4. Down adjust button
5. Micro USB charging port
6. Time/date display
7. Temperature display
8. Fast wireless charging plate
9. Reset aperture

General Usage:

- **Setting the time:** On first use to set the Recharge's internal clock to the correct time, first switch the unit on by pressing the Display on/off button (1). Next long press the Menu button (3) and select between 12H or 24H time display. Use the up adjust and down adjust buttons (2 and 4) to make your selection then press the Menu button (3) to confirm. Next set the hour and minutes using the same method always confirming your selection with the Menu button (3).
- **Setting the year and date:** Press the Menu button (3) to change to date view mode then long press again to adjust the date. First set the current year using the up adjust and down adjust buttons (2 and 4) and Menu button (3) to confirm followed by the month and day settings accordingly.

- **Setting the alarm:** The Recharge has 3 individual alarms that can be set at different times throughout the day. To enter the alarm setting mode, press the Menu button (3) repeatedly until you see alarm modes A1, A2 and A3. In any of these modes, long press the Menu button (3) to adjust the time setting, then use the up adjust and down adjust buttons (2 and 4) and Menu button (3) to confirm the required time. Once you have set a time, the relevant alarm will read "ONA1", "ONA2" or "ONA3" and a small alarm icon  will appear in the bottom corner of the screen. To enable or disable the alarms at any time, press the up adjust and down adjust buttons (2 and 4) and Menu button (3) in the relevant alarm time mode (e.g for alarm 1, "--A1" is alarm 1 off "ONA1" is alarm 1 on and so on). To turn the alarm sound off during activation, press any button on the unit. If no button on the unit is pressed the alarm will sound for 60 seconds and then turn itself off.
- **Adjusting the display:** There are 3 possible display settings entitled DP--1, DP--2, and DP--3 respectively. To enter the display setting mode, press the up adjust button (2) repeatedly until you reach the required setting then press the Menu button (3) to confirm. "DP--1" alternates between time and date display, "DP--2" shows only the current date and "DP--3" only the current time. There is also a power saving mode which when selected will turn off the display after 15 seconds of inactivity. To enable the power saving feature, press the down adjust button (4) repeatedly to select either "--SD" for off or "ONSD" for on, then press the Menu button (3) to confirm. To view the display for a 15 second period during this setting, press any button on the unit.
- **Using the wireless charging plate:** The Recharge is also equipped with a Qi certified, wireless charging plate capable of charging compatible devices. To charge a device, simply lay it as squarely as possible on the wireless charging plate on top of the unit (8). When your device is charging the small charging icon  in the top left of the display will flash. **Note:** To fast charge compatible devices (Apple 7.5W and Samsung 10W) ensure that the Recharge is connected to a fast charge enabled USB power supply.
- **Temperature display:** The Recharge can also display the current room temperature in either Centigrade or Fahrenheit. To change the setting, press and hold the down adjust button (4) for around 2 seconds.

FAQ:

Q) Why doesn't the wireless charging plate charge my device? **A)** Ensure that your device is wireless charging compatible and that the Recharge is connected to a compatible USB power supply. Also ensure your device is laid squarely on the charging plate, to ensure a good connection.

Q) Why isn't the fast charging working? **A)** Ensure that your device is fast charge compatible and that the Recharge is connected to a fast charge enabled USB power supply.

Warnings:

- For reasons of electrical safety, this device must never be immersed in water, exposed to damp or humid conditions or subjected to excessive forces.
- Do not use this device if you find that it is damaged in any way.
- Only use the USB power supply as recommended by the manufacturer.
- Clean only with a soft, dry cloth.
- Do not attempt to repair this device or take apart under any circumstances, as this will invalidate your warranty.



This product is classed as Electrical or Electronic equipment and should not be disposed with other household or commercial waste at the end of its useful life. The goods must be disposed of according to your local council guidelines.

*Errors and omissions excepted.
Copyright© 2020. AVSL Group Ltd.*