



2KW Upright Portable Fan Heater

Order ref: 450.010UK

User Manual

A handy upright portable fan heater with 2 heat settings and overheat protection. The room thermostat is adjustable, allowing for temperature to be easily controlled. Ideal for home and individual use when additional heat is required.


Specification:

Power: max	2000W
Dimensions	280 x 220 x 125mm
Weight	680g

Features:

- 2 Heat settings: 1000W and 2000W
- Adjustable room thermostat
- Overheat protection
- LED power indicator
- Carry handle

Controls diagram:

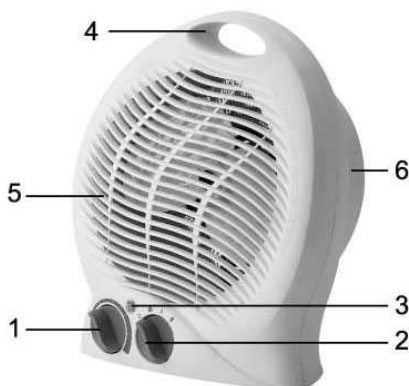

1. Thermostat switch
2. Heat select switch
3. Power indicator light
4. Handle
5. Air outlet grill
6. Air inlet grill

Before first use:

1. Check if the electrical voltage of the main supply and the load of the socket match the rated voltage and power marked on the rating label of the appliance.
2. Check that the socket and the plug are undamaged, and that you insert the plug correctly in the wall socket.
3. Stand the appliance on a stable and flat surface, do not stand on long pile carpets or rugs for risk of fire.
4. Be sure that there is enough space for the fan heater while operating, at least 50cm around the appliance, and in front of the air outlet there should be at least 120 cm. Never position the appliance directly under a mains socket.

Using the appliance:

1. On first use turn the thermostat switch to the minimal value, at the same time turn the heat select switch to the "O" position.
2. Plug in the appliance and turn the thermostat switch to the maximum position. Then turn the heat select switch to choose cool air or warm air. When the heater is working the indicator, light will be on.
 - a) Turn the heat select switch to the "❄️" position, the heater will blow cool air.
 - b) Turn the heat select switch to the "I" position, the heater blows warm air, working at 1000W.
 - c) Turn the heat select switch to "II" position, the heater blows hot air, working at 2000W.
 - d) Turn the heat select switch to "O" position, the heater stops working and the indicator light will be off.
3. To adjust the thermostat to the desired room temperature, first set the thermostat switch to the maximum position.
 - a) When you feel the room temperature is comfortable, turn the thermostat switch anti-clockwise slowly until the appliance stops working. Then the thermostat switch will keep the room temperature at the current desired temperature automatically.
 - b) You can also turn the thermostat switch anti-clockwise to the minimum position or turn the thermostat switch clockwise to maximum position to adjust the room temperature lower or higher.

Safety warnings:

- For reasons of electrical safety this device must never be immersed in water, exposed to damp conditions or excessive force. Never use this heater in a bathroom or in the immediate surroundings of a swimming pool, shower, hot tub or where splashing water is present.
- Do not use this device if you find that it is damaged in any way.
- Do not attempt to repair this device or take apart under any circumstances, as this will invalidate your warranty.
- Never cover the heater or place anything on the inlet or outlet grilles, as this may result in overheating or fire.
- Never allow foreign objects to be pushed into the motor, or fan blades as this may result in fire, injury or damage to the unit.
- For reasons of electrical safety this device is fitted with a thermal cutout. If the heater reaches its maximum temperature it will stop operating, if this occurs turn the heat select switch to "O" position, turn the thermostat switch to the minimal position and remove the plug from the socket immediately. Check that there is sufficient safe space around the unit and nothing covering its inlet and outlet grilles and then leave it for 10 minutes to cool down before operating.
- Use only a damp cloth to clean the surface of appliance, avoid water going inside the appliance and dry the appliance thoroughly before usage. Never attempt to clean the appliance while it is on or still hot.
- Do not use this heater with a programmer, timer or any other device that switches the heater on automatically, since a fire risk exists if the heater is covered or positioned incorrectly.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Please ensure you have read these instructions thoroughly before first use.



This product is classed as Electrical or Electronic equipment and should not be disposed with other household or commercial waste at the end of its useful life. The goods must be disposed of according to your local council guidelines.

*Errors and omissions excepted.
Copyright© 2018. AVSL Group Ltd.*