

## 18V Cordless Drill Set

Order ref: 710.280UK

User Manual

An electric cordless drill with accessories, ideal for trade and domestic work. This lightweight but powerful tool incorporates a host of versatile features, such as torque adjustment, forward/reverse operation, a 10mm hand-tightened chuck and a handy LED work light. Includes a 13pcs drill and screw bit set.

### Specification:

|                     |   |
|---------------------|---|
| <b>Speed</b>        | 0-400/1350rpm                             |
| <b>Battery</b>      | 18V Lithium Ion 1500mAh                   |
| <b>Charge time</b>  | 3-5 hours (1-hour quick charge)           |
| <b>Power supply</b> | 100-240VAC 50/60Hz                        |
| <b>Dimensions</b>   | 210 x 210 x 75mm (drill and battery only) |
| <b>Weight</b>       | 1.22Kg (drill and battery only)           |

### Features:


- 18V rechargeable lithium battery, with spares available (710.281UK)
- Variable 2-speed motor (0-400/1350rpm)
- 21+2 Torque adjustment
- 10mm Keyless chuck
- 32Nm Maximum torque

### In the box:

- 18V Cordless drill
- Lithium Ion battery pack
- 1pcs screwdriver bit holder
- 6pcs screwdriver bits
- 6pcs drill bits
- UK power supply

### Diagram of controls and features:

- 1.Speed selector
- 2.Keyless chuck
- 3.Torque selector
- 4.LED Light
- 5.Left/Lock/Right switch
- 6.On/off switch with speed control
- 7.Battery Button
- 8.Battery pack
- 9.Battery capacity indicator lamp

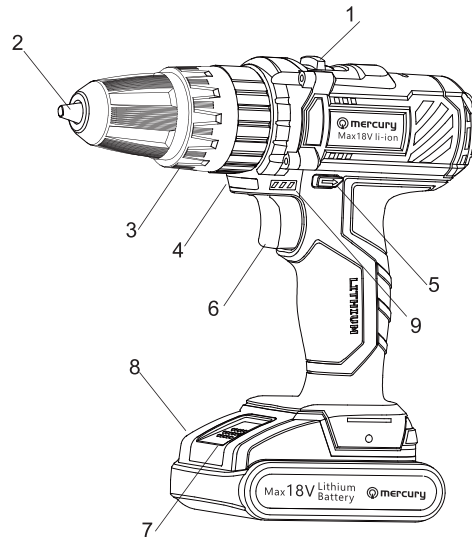

### Safe use of power tools:

- Fully charge the battery before first use. The battery will only reach full capacity after being charged and discharged several times. Try to avoid short periods of charging and only charge battery pack when fully empty. The adaptor, charger and battery pack will be warm when charging, this is perfectly normal.
- Avoid operating at a low speed for a long time as it will increase the risk of the motor overheating. To prevent this, let the motor cool down regularly (Stop using for 15 minutes).
- Maintain power tools. Check for misalignment or binding of moving parts, breakage of parts and any other condition that may affect the power tool's operation. If damaged, have the power tool checked by an expert before use.
- Stay alert, watch what you are doing and use common sense when operating a power tool. Do not use while you are tired or under the influence of drugs, alcohol or medication.
- Use personal protective equipment. Always wear eye protection, protective equipment such as a dust mask, non-skid safety shoes, hard hat, or hearing protection used for appropriate conditions to reduce the risk of personal injuries.
- Do not wear loose clothing or jewelry and keep long hair, clothing and gloves away from moving parts to avoid the risk of personal injury.
- Disconnect the plug from the power source and/or the battery pack from the power tool before making any adjustments, changing accessories, or storing power tools. Such preventive safety measures reduce the risk of starting the power tool accidentally and causing injury.
- Recharge the battery only with the charger supplied. A charger that is suitable for one type of battery pack may create a risk of fire when used with another battery pack.
- Under abusive conditions, liquid may be ejected from the battery pack; avoid contact. If contact accidentally occurs, flush with water. If liquid contacts eyes, additionally seek medical help. Liquid ejected from the battery may cause irritation or burns.
- Store idle power tools out of the reach of children and do not allow persons unfamiliar with the power tool or these instructions to operate the power tool. Power tools are dangerous in the hands of untrained users.
- Have your power tool serviced by a qualified repair person using only identical replacement parts. This will ensure that the quality and safety of the power tool is maintained.
- Always use the power tool, accessories and tool bits etc. in accordance with these instructions, taking into account the working conditions and the work to be performed. Use of the power tool for operations different from those intended could result in a hazardous situation.



### Warning:

- Read all safety warnings and all instructions. Failure to do so may result in electric shock, fire and/or serious injury.
- Avoid body contact with earthed or grounded surfaces, such as pipes, radiators, ranges and refrigerators. There is an increased risk of electric shock if your body is earthed or grounded.
- To clean, always use a dry or moist, but not wet, towel. Many cleaning agents contain chemical substances which may cause damage to the plastic parts of the machine. Do not use any strong or inflammable cleaners such as petrol, paint thinner, turpentine or similar cleaning agents.
- Do not expose to rain or wet conditions. Water entering a power tool will increase the risk of electric shock.
- Never use the cord for carrying, pulling or unplugging the power tool. Keep the cord away from heat, oil, sharp edges or moving parts. Damaged or entangled cords increase the risk of electric shock.
- Do not use the power tool if it is damaged in any way and never attempt to repair it yourself as you will invalidate the warranty.



This product is classed as Electrical or Electronic equipment and should not be disposed with other household or commercial waste at the end of its useful life. The goods must be disposed of according to your local council guidelines.