

# Splashproof Bluetooth Sports Earphones

JOGS

Item ref: 100.545UK

User Manual


In-ear; out of mind. Made for people who stay active, our splashproof Bluetooth sports earphones are designed to stay put, come rain or shine. Supplied with 3 sizes of earbud and earhook, each earpiece can be tailored to the unique shape of your ear. The materials are firm yet flexible, providing a comfortable yet stable fit. And during downtime, the magnetic fastening forms a secure loop around the neck. The lightweight design delivers heavyweight sound, with intuitive inline controls for volume, track selection and hands-free phone calls. Up to 4 hours playback is available from a single charge, with Bluetooth 4.1 providing speedy wireless connectivity within 10m range.

## Features

- IPX4-rated splashproof design; ideal for outdoor use.
- Magnetic earbuds and ribbon cable for tangle-free storage
- Detachable earhooks for comfort and security, even while active
- Splashproof inline hands-free mic and volume/track controller
- Bluetooth 4.1 for up to 10m wireless range
- USB rechargeable battery; 4 hours usage from a single charge (cable included)
- Includes hard-shell carry case and 3 sizes of earhooks and earbuds
- Fully compatible with iOS and Android devices

## Technical Specifications

Speaker driver	10mmØ
Sensitivity	98db±3db
Impedance	32 Ohms±15%
Frequency response	20hz-20khz
Bluetooth version	4.1
Bluetooth range	Up to 10m (clear line of sight)
Power supply	Internal rechargeable 90mAh Lithium Ion battery
Charge time	2 Hours
Battery life: Bluetooth playback	Up to 4 hours
Weight:	20g

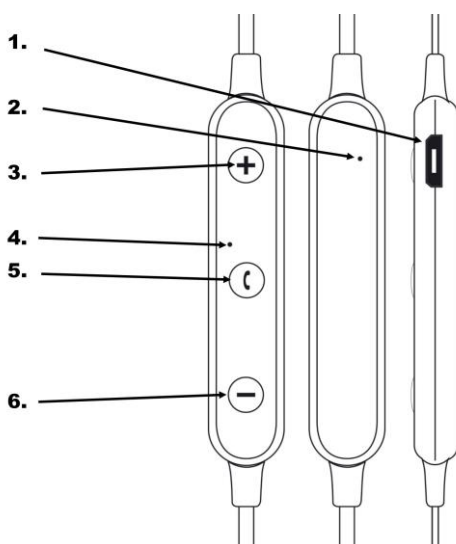

- 1. USB charging socket**
- 2. Hands-free microphone**
- 3. Volume up/next track**
- 4. LED light**
- 5. Multi-function (MF) button**
- 6. Volume down/previous track**

### Powering on/off

Press and hold the MF button until the blue light blinks and the voice message "power on" is heard. To power off, press and hold the MF button until a red light blinks and the voice message "power off" is heard.

### Pairing with your device

Press and hold the MF button until alternating blue and red lights blink and the voice message "ready to pair" is heard. The Bluetooth pairing name is "AV:LINK-JOGS" and, where required, the default pairing code is 0000. When connected, the message "connected" will be heard and the blue LED will blink.

**Volume up/next track**

Short press the (+) button to skip to the next track or press and hold the (+) button to turn the volume up.

**Volume down/previous track**

Short press the (-) button to skip back to the previous track or press and hold the (-) button to turn the volume down.

**Play/pause:**

Short press the MF button to play or pause the current track.

**Hands-free operation:**

When you receive an incoming call, the voice message "incoming call" will be heard, followed by a readout of the caller's telephone number. To accept the call, press the MF button once, or to reject it press the MF button twice. Once you have completed your call, press the MF button once to hang up. To dial the last number stored on your phone, press the MF button twice, either when listening to music or in standby mode.

**Charging the device:**

Only use the USB cable provided to charge the headphones, first ensuring that they are switched off. A constant red LED indicates that the headphones are charging, followed by a constant blue LED when charging is complete. Charging time is normally around 2 hours from 'flat'. The device will give up to 3 hours of playback time from a single charge.

**In the Box**

- Splashproof sports earphones
- USB charging cable
- Hard-shell carry case
- Additional silicone earbuds and earhooks (2 pairs; small and large)
- Cable clip
- User guide

**FAQ**

**Q)** Why won't the Bluetooth headphones pair with my device? **A)** Check that the headphones are in pairing mode, Bluetooth is enabled on your device and it is in scan mode.

**Q)** Why do the Bluetooth headphones disconnect from my device within the stated 10m transmission distance? **A)** The maximum transmission distance stated is dependent on a clear line of sight between the headphones and your device. If there are large metallic objects or other devices transmitting radio or wireless signals in the vicinity, they can impact on the reception of the headphones.

**Q)** Why won't the Bluetooth headphones switch on? **A)** Check that the headphones are fully charged before operation.

**Q)** Why won't the Bluetooth headphones connect to my PC? **A)** Check that your PC supports the A2DP Bluetooth profile.

**Safety Disclaimer**

Do not attempt to service this product yourself as opening or removing covers may result in fire, electric shock or equipment damage and will also invalidate the warranty. This product is only designed for indoor use and must be kept away from water and high humidity along with high temperatures and direct sunlight.

This product is classed as Electrical or Electronic equipment and should not be disposed with other household or commercial waste at the end of its useful life. The goods must be disposed of according to your local council guidelines.

CE  IPX4