

Item ref: 103.112UK

User Manual

USER MANUAL


KARAOKE MIXER KIT



Box Contents:

- 1 x Microphone Mixer
- 2 x Dynamic Microphones with 3m cable & 6.3mm Jack
- 1 x 9-12V DC Power supplies
- 1 x RCA Cable (1.5m)

Instruction:

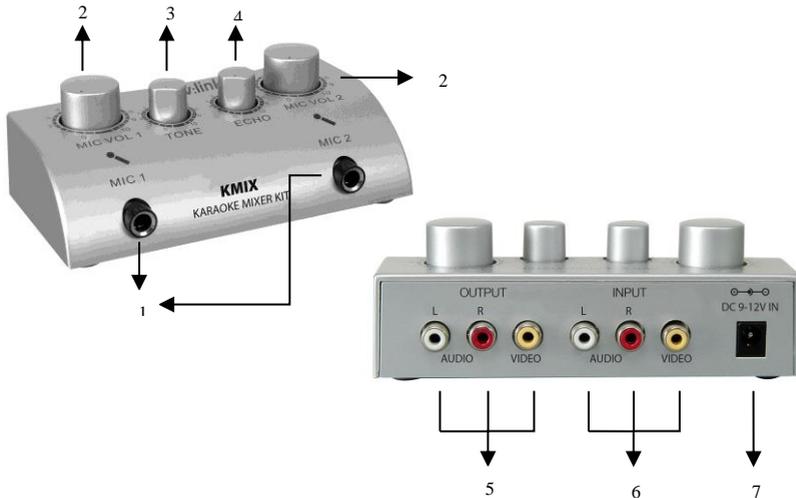

1. "MIC 1" and "MIC 2" INPUT
Standard 6.3mm jack for microphone input.
2. "MIC 1" and "MIC 2" VOLUME CONTROL
These control the volume of each individual microphone channel.
3. TONE CONTROL
Adjust the output level of your voice: 0 = less treble, 10 = more treble.
4. ECHO CONTROL
Varies the echo effect applied to the microphone input:
Turning the control towards "10" enhances the echo effect and turning towards "0" reduces it.
No echo effect will be applied at "0" position.
5. INPUT CHANNEL
Audio and Video signal input for music sources like CD/DVD players and other audio/video equipment. Note: ensure volume level is set to zero when connecting.
6. OUTOUT CHANNEL
Audio/video signal to either TV, HI-FI system or amplifier. Note: ensure volume level is set to zero when connecting.
7. 9V-12V DC POWER CONNECTION

*Errors and omissions expected
Copyright© 2012. AVSL Group Ltd*