

USERS'MANUAL FOR URC-22

I General Description

The universal remote controller of URC-22B is a new model of multi-functional remote control for European Market.

It features:

- 1、 7 Device Banks: TV1, TV2, VCR1, VCR2, SAT/CABLE, CABLE/SAT and AUX.
- 2、 3 Operating Modes:Set-up Mode, Quick Search Mode, and Display Mode.
- 3、 Transmission and Set-up Indicating LED.

II Operating Process

1、 Set Up Devices

According to the brand code in the attached Device Code List, find out the code of the device that you want to control. Then follow steps as below:

- 1)Press[SET]key and hold it ,Then press the device key that you want to control, such as[TV1], [TV2], [VCR1] or [AUX], etc.
- 2)The LED will be on at the moment, Release the pressed keys.
- 3)Enter the 3-digit Device Code.
- 4)If the entered Device code is correct, the LED will be off automatically. If the entered Code is in correct, the LED will blink twice and keeps being at setup mode (being on). then pls return to Step 3).
- 5)Try if keys on Remote Controller work or not. If most keys work improperly, please find other code in the same brand,repeat(1-5) till you

feel the main keys work well enough.
Note: In the process of setup, if you want to stop setup work, pls press device

key .(If no key is pressed in 10 seconds, the remote controller will leave setup mode automatically.)

2、 Quick Search

After you have set up several times the device you want to control, it still does not work (i.e. the device still cannot be controlled by URC-22B),or you cannot find the correct code in the Device Code List, you can use Quick Search function to find out the correct code. When URC-22B has entered into Search Mode, the preset search direction is Forward Search, but you can use [SET] key to switch between Forward Search and Backward Search during search process.

- 1)Power on the device you want to control. If it's a VCR, it must be inserted with a tape.
- 2)Press and hold[SET]Key. In the meantime, press the Device Key that you want to control, such as [TV12#] , [VCR2] etc.
- 3)The LED will be on at the moment. Release the pressed keys.
- 4)Press the [SET] key again and release it. Now the URC-22Bunit enters into Quick Search Mode and the LED keeps flashing.
- 5)Point the URC-22B unit to the device and press [POWER] key. If it's VCR/AUX,you can press either [POWER] key or [PLAY] key.See if the device work or not(power off or play).If the device works, turn to step 6). If not, repeat step5).
- 6)Then check if other keys such as

[CH+/-], [VOL+/-]...can function properly(i.e.if the device can be controlled. if not, return to step5).

7)Some devices react slowly to [POWER] signal. In search process, you can press [SET] key to switch between Forward/Backward Search to change search direction and find the right code quickly.

8)Whenever you want to leave Search Mode, press Device Key, and the LED will be off.

Note: In Search Mode, besides [POWER] key ([POWER] key and [PLAY] key in the case of VCR/AUX), all other keys can be checked function normally. That means you can test other Keys without leaving Search Mode. The URC-22B unit will leave Search Mode if no key is pressed for 30 seconds.

3.Auto Search

- 1)Power on the device you want to control, If it is a VCR, it must be inserted with a tape.
- 2)Press and hold [SET] key. In the meantime, press and hold [POWER] key for more than 3 seconds and the auto search will begin.
- 3)Press any key to exit.

4、 Brand Code Display

The control Code is a 3-digit number and the URC-22B unit can make all the 3 digits display.

- 1)Press and hold the [SET] key, in the meantime press the digit that you want to display, such as 1,2 or 3.
- 2)Release the [SET] key.
- 3)Count the time the LED blinks, and the blinking time is the digit. If there is no blink, the digit is zero.

5、 Remarks:

Please do not press any keys when replacing batteries to avoid missing set-up data.

8 in 1 Universal Remote Control



IMPORTANT
READ THESE
INSTRUCTIONS BEFORE
USE. PLEASE RETAIN
FOR FUTURE REFERENCE

User Manual

TV/XT Codes

Accord	0711	Brinkmann	0711
ACE	0713	Briovenga	0104,0155,0164,0165,0200,0201
Admiral	0032,0155,1011		0257,0711,1011
Adyson	0730	Britannia	0730
Agassi	0730	Bruno	0158
Aiko	0707,0711,0730	BSR	0016,0019,0021
Aim	0711	Bush(UK)	0022,0711,0738
Aiwa	0261	Cableline	0246,0247,0251
Aikai	0005,0159,0169,0707,0711,0730	Carad	0717
	0731,0745,1020	Carena	0742
Akiba	0711,0731,0742	Century	0145,0146,0155
Akita	0711	CGE	0019,0202,0024,0145,0151,0169
Alkora	0711,0731,0738,0740		0170,0231,1004
Alaron	0730	CGM	0093
Alba	0705,0711,0730,0731,0738,0744	Chaparral	0216
Albrail	0001	Clayton	0001,0166,0167
Allstar	0711	Cloronic	0705,0711
Amplivision	0739	COOIAM	0138
Amstrad	0006,0711,0731,0740,1011	Condor	0711,0730
Anan	0711	Contec	0033,0016,0730
Anam National	0711	Continental	0733,0744
Anitech	0711	Edison	
Anisonic	0711	Crosley	0024,0025,0145,0155,0231,1004
Arisona	0711	Crown	0705,0711,0741,0744,1008
A.R. Systems	0711	CS Electronics	0730
Arthur Martin	0739	CTC Electronic	0096
ASA	0007,0009,0013,0032,0094,0155	Deewoo	0168,0209,0711,0730
	0161,1010	Daiichi	0730
Asberg	0711	Dansai	0707,0711,0730
Asuka	0731	Dansette	0730
Atlantic	0711,0730	DSE(Diffusion)	0026,0027,0033
Auchan	0739	Decca(UK)	0002,0004,0026,0028,0031,0259
Audiovision	0160,0711,0731		0711
Ausind	0008	Dual	0235,0238,0711,0737,1011,1017
Autovox	0004,0007,0012,0014,0015,0078	Dual-Tec	0004,0011,0019,0029
	0079,0104,0153	Dumont	0155,1010,1023
AWA	0026,0027,0033,0159,0160,0169	Elbe	0001,0711,0711,0717
	0220,0706,0708,0709,0711,0714	Elbe-Ebit	1011
	0730,0740,1006	Elektronika	1008
Baird	0162,0737	Elm	0730,0745
Basic Line	0163,0711	Elite	0108,0711,1004
Baur	0711,1017,1037	Elman	0019,0029,1023
BEKO	0170,0226,0711,0719,1018,1024	Ela	0730
BEUST	0741	Emerson	0146,0155,0711,1010
BLANQUET	0010,0017,0019,0020,0054,0021	Europan	0711,0730,0741,1008
	0232,0233,0234,0236,0241,1004	Europa	0740
Blue Sky	0711,0719,0738,0742,0744	Europan	0000,0004,0019,0029,0030,0146
BPL	0026,0160,0162,0163,0711		0711,1023
Brandt	0733,0735,0746	Expert	0739

5

Fenner	0033,0193,0240	Hisawa	0739,0742
Ferguson	0733,0735,0746	Hitechi	0004,0040,0041,0042,0044,0047
Fidelity(UK)	0003,0034,0229,0711,0730		0055,0061,0062,0063,0064,0065
Filmnet	0202,0248		0066,0067,0068,0174,0221,0222
Finlandia	0745,1010		0710,0711,0737
Finlux	0007,0008,0009,0013,0025,0026	Hitsu	0742
	0029,0035,0094,0161,0169,0221	Hoshai	0742
		Hotel TV	0704
		Huanyu	0730
		Hygashi	0730
		Hyper	0003,0004,0033,0153,0193,0730
		Hypon	0739,0742
		ICE	0730
		Ices	0730
		Imperial	0019,0022,0024,0145,0151,0169
			0170,0231,0711,1004
		Ingelen	0717,0744
		Inno Hit	0000,0004,0031,0043,0060,0146
		Iris	0175,0711,1004
		INTER (265)	0725
		Interco	0019,0717,1017
		Interfunk	0005,0027,0040,0045,0046,0052
			0069,0070,0071,0073,0075,0155
		Intervision	0711,0742,0744,1023
			0008,0039,0043,0060,0153,0262
		Iskra	0711
		IT	0723
		ITS	0730
		ITT/Nokia	0005,0032,0033,0040,0041,0045
			0049,0068,0070,0071,0072,0074
			0745,0746,0168,0176,0177,0717
		Janco	0249,0250
		JEC	0707
		JVC	0077,0119,0178,0179
		Kaisui	0163,0711,0730,0742
		Kamp	0730
		Karcher	0159,0163,0175,0711,0717,0741
			0744
		Kawasho	0730
		Kendo	0146,0711,0717,1011
		Kennedy	0025,0027,0037,0044,0052,0055
		Kingsley	0028,0078,1011
		Kneissel	0730
		KONIG	0000,0711
		KONIG	0027
		Konka	0711
		Kontakt	0744
		Korting	0037,0155,0157,0741
		Kotron	0740
		Kuba	1017

6

Kyocera	0740	Neufunk	0711,0717
Lenco	0033,0039,0163,0238,0239,0240	New Tech	0737
	0711,1023	Nicamagic	0730
Lesson	0711,0718	Nikkai	0707,0730
Lenoir	0004	Nobilko	0003,0006,0029,0051,0146,0730
Leto	0705,0711		1023
LG	0711,0730	NOKIA	0720,0745,1004,1010
LIFC	0711,0738	Normende	0065,0067,0075,0088,0099,0100
Linton	1017		0101,0102,0103,0104,0134,0185
Loewe Opta	0052,0081,0155,0156,0189,0213		0186,0222,0711,0733,0737,1003
	0242,0242		1036
Logik	0028	Oceanic(F)	0005,0040,0165,0106,0107,0739
Logix	0738	Okano	0014
Luma	0730	Onceas	0700
Lumaton	1011	Orion	0106,0167,0028,0057,0088,0108
Luxor	0005,0045,0047,0055,0068,0083		0109,0187,0188,0189,0711,0735
	0084,0085,0086,0087,0162,0177		0740,1001
	0745,1010	Ormond	0738
Magnadyne	0000,0019,0025,0029,0057,0147	Osaki	0711,0740
	0149,0150,0155,1023	Otto Versand	0025,0027,0044,0045,0052,0055,0711
Magnafon	0000,0003,0008,0029,0030,0730		1917
	1023	Pael	0003,0008,0730
Manesh	0707	Palladium	0197,0711
Manhattan	0738	Palsonic	0711,0740
Marantz	0026,0027,1017	Panama	0730
Mark	0730	Panasonic	0001,0003,0019,0037,0040,0106
Matsui	0004,0006,0028,0041,0088,0182	Pathe Cinema	0110,0111,0112,0114,0190,0212
	0705,0707,0735,0742,0744		0241,0711,0745,1036
Maximal	0058	Perthsh	0739
Maxwell	1023	Pershin	0199
Medion	0738	Phico	0019,0022,0024,0025,0151,0155
Megas	0717		0169,0170,0231,0711,1004
Meltronic	0255,0711,0730,0737,1010,1017	Philex	0229
Melvoch	0739	Philips	0003,0026,0027,0046,0073,0113
Metz	0018,0053,0089,0090,0091,0155		0115,0155,0191,0192,0193,0194
	0180,0183		0177,0195,0249,0250,0267,0268
			0737,1009,1011,1017,1024,1033
Micromax	0738	Phoenix	0730
Minerva	0010,0018,0045,0051,0053,0744	Phonola	0175,0711,0730
Minotika	0740	Pilot (1624Y)	0729 (PIP)
Mitsubishi	0044,0052,0092,0119,0154,0155	Pilot (P1707Y)	0721
	0181,0182,0711	Pilot (P3033)	0727
Mivar	0000,0003,0093,0094,0095,0245	Pilot (P4005)	0728
	0259,0730,0734	Pilot (P567)	0728
Morgens	0711	Pilot (P716)	0724
MTC	0730	Pioneer	0000,0027,0067,0243,0711,0737
Multisystem	0159	Polestar	0214
Multitec	0738	Powerpoint	0744
Multitech	0096,0170,0172,0711,0730	Prandoni-Prince	0008,0032,0146,1023
Murphy(UK)	0041,0730	Proffronite	0032,0217
NEC	0184,0711,0742	Proffronite	1023
Neckermann	0004,0026,0044,0055,0082,0097	Promie	0746
	0170,0711,1008,1011,1017,1037		
N.E.L.	0166,0711		

7

Prosat	0001	SEL-Sinudyne	1001,1011,1023
Prosonic	0705,0711,0730,0738	Seleco	0011,0058,0708,1011
Protech	0738	Setra	0707
Protection	0711	Serino	0717,0742
PYE	0711	Sharp	0044,0054,0110,0124,0136,0198
Uadua Vision	0739		0225,0227
Quasar	1023	SHOV	0033
Quelle	0004,0005,007,0008,0009,010	Siarem	0000,0025,0029,0155,1023
	0013,0116,0026,0027,0028,0045	Sicatel	0001
	0050,0051,0052,0068,0094,0153	Siemens	0010,0202,0032,0233,0234,0236
	0221,0221,0232,0234,0235,0236		0711,1004
	0711,0738,1003,1004,1007,1008	Sieba	0254
	1010,1011,1022,1035,1036	Silva	0710
	0242,0711	Silver	0160,0711
Radiola	1023	Singer	0025,0029,0147,0149,0155,0711
Radiomarelli	0730		0705,0740
Radiolone	0705,0740		0022
Rank(UK)	0022,0094	Sinudyne	0006,0016,0025,0026,0029,0057
RBM(UK)	0022,0094		0109,0125,0155,0192,0197,0711
RCA	0204,0210,0211,0246	Skysonic	0718
Radiffusion(UK)	0005,0041,0116,0745	Solovox	0745
Red Star	0711	Sonorlor	0739
REX	001,0021,0032,0070,0079,0118	Sony	0028,0119,0126,0127,0128,0129
RFT	1023		0130,0162,0189,0228,0260
Rhaphody	0730	Stern	0078
Roadstar	0039	Sunikai	0742,0744,1001
Royal Lux	0740,0741	Sunistar	0705
SABA	0000,0005,0067,0075,0085,0088	Superia	0730
	0090,0010,0103,0117,0155,0185	Supertech	0730
	0186,0222,0224,0733,0755,0737	Supumax	0730
	0745,0746,1032	Sutessa	0735
		Sydney	0730
Sagem	0717,0742	Taiyang	0730
Saisho	0004,0006,0028,0088,0162,0244	Tai Wah	0218,0219
Salora	0005,0047,0048,0055,0086,0088	Tandberg	0016,0180,0266,1011
	0069,0076,0082,0088,0097,0162	Telephonis	0730
	0177,0195,0249,0250,0267,0268	Teac	0002,0004,0026,0028,0031,0131
	0745,1010	Teac	0712,0740,0742
Sambors	0000,0004,0008,0029,0030,0043	Tec	0735,0743,1011
	1023	Tech Line	0738
Samsung	0026,0033,0043,0150,0160,0170	Technics	1036
	0096,0102,0125,0264,0702,0703	Technivision	0263
	0711,0716,0730,1000,1015,1016	Tele +1	0248
	1029,1031	Teleavia	0186,0733
Sandra	0730	Telefunken	0067,0075,0098,0110,0133,0134
Sansui	0711		0135,0140,0185,0186,0221,0235
Sanyo	0013,0031,0044,0074,0119,0120	Telesonic	0034,0205,1032
	0121,0122,0123,0162,0167,0170	Telesonix	0203,0246
	0182,0195,0205,0711,0730	Telesonix	0730
	0004,0011,0015,0019,0026,0026	Telesonix	0739
	0036,0038,0255,0258,0262,0711		
	0737,0738,1011,1017,1023,1028		
	1030		
SEG	0096,0711,0730,0738,0744		

8

Tensai	0013,0016,0033,0037,0039,0178	Univox	0001
	1023	Vegavox	0169
Tevion	0738	Videocon	0033,0130,0141,0715
Thomson	0065,0067,0075,0078,0098,0100	Videologiq	0730
	0160,0165,0166,0222,0722,0320	Videotechnic	0730
	0735,0737,0743,0746,1027,1032	Visiola	0730
Thorn-Ferguson	0001,0135,0136,0137,0140,0144	Voxson	0032,0155
	0140,0152,0160,0166,0229,0256	Walham	0733
	0735,1010,1011	Watson	0037,0705,0738,1004
Tokyo	0707,0730	Watt Radio	0001,0003,0025,0029,0030,0057
Toshiba	0022,0044,0094,0119,0138,0139		0730,1023
	0141,0142,0707,0732,1035,1057	Weg Color	0119,0143
Transonic	0742	Whitefordale	0718
Translec	0730	White	0003,0037,0159,0730
Trilux	1005,1021	Westinghouse	
Triumph	0732	Winco	0740
Uher	0011,0012,0036,0037,0038,0078	Yamishi	0742
	0235,1017	Yoko	0004,0159,0730,0741,1008
Ultravox	0003,0025,0028,0096,0146,0155	Zanussi	0078
	0730	Zenith	0203,0237
Unimor	1002,1012	Others	0206,0207,0208,1013,1014
Universum	0094,0160,0221,0738,0741		

VCR Codes

Aiwa	0356	Goldstar	0282
Akai	0269,0270,0271,0281,0309,0310	Goodmans	0301,0356
	0357	Granada(UK)	0272,0278,0283,0314,0369
Alba	0356	Grundig	0272,0275,0284,0356,0361,0369
Amilch	0311	Hansaatic	0278,0285
ASA	0282	Hinari	0281,0286,0287,0317,0360
Baird	0271,0273	Hitachi	0273,0281,0285,0288
Blaupunkt	0272,0274,0275,0312,0369	Imperial	0277,0289
Blue Sky	0356	Interfunk	0270,0290
Brimmam	0356	Intervision	0356
Bronova	0276,0283	ITT-Nokia	0270,0273,0276,0290,0291,0292
Bush(UK)	0281,0356	JVC	0270,0273,0292,0318,0319,0320
CGE	0270,0277		0291,0321,0328
CGM	0291	Kendo	0356
Decca(UK)	0278,0356	Kneissel	0356
Dual	0273,0279	Lenco	0325,0355
Elbe	0313	Lifetec	0356
Emerson	0286	Loewe Opta	0272,0278,0369
Finlux	0278	Lumax	0287,0322,0360
Firstline	0356	Luma	0322
Fisher	0280,0314,0315,0316	Luxor	0285,0291
Funai	0359	Magnasonic	0291
GBC	0281	Marantz	0278,0279,0301
GEC(UK)	0278	Matsui	0287,0322,0356
Geloso	0281	Medion	0356
General	0359	Memorex	0282,0314
General	0356	Metz	0272,0275,0294,0369,0370
Technic			

Micromy	0356	Samsung	0289
Minerva	0272,0275,0369	Sansui	0320,0356
Mitsubishi	0278,0281,0289,0320,0362,0751	Sanyo	0291,0314,0316,0339
Multitech	0281,0325	Schneider	0278,0281,0289
NAC	0363	Sears	0315
NEC	0273,0313,0320	SEG	0281,0289
Neckermann	0270,0272,0273,0278,0285,0286	Selec	0309
		Senta	0277
Nobilico	0272,0369	Sharp	0001,0302,0341
Nordmende	0270,0273,0279,0292,0295,0296	Shinton	0281
	0297,0318,0319,0321,0323,0324	Siemens	0272,0275,0291,0369
	0326,0327,0328,0329,0330	Siurdynne	0278,0287
Okano	0356	Sony	0296,0299,0340,0342,0343,0344
Orion	0286,0322,0331,0332,0333,0356	Tandberg	0322
		Tatung	0278,0356
Osaki	0360	Technisat	0356
Otto Versand	0278,0285	Telefunken	0270,0273,0279,0292,0318,0319
Palladium	0271,0281	Telemaster	0321,0323,0330,0345,0346,0347
Panasonic	0274,0290,0312,0354	Tevion	0356
PNational		Thomson	0270,0273,0279,0292,0318,0323
Penney	0313		0324,0328
Pentax	0288	Thorn-Ferguson	0270,0273,0300,0303,0304,0305
Philips	0278,0302,0334,0335,0336,0369		0306,0308,0319,0329,0330,0348
Phonola	0278,0335		0368
Pilot (1621Y)	0753 (Video2)	TMK	0286
Pilot (P1628Y)	0752	Topline	0356
Pilot (P3060)	0754	Toshiba	0273,0292,0307
Pioneer	0278,0320,0334,0336,0363,0364	Uher	0273,0289
	0365	Ultravox	0276
PIE	0320	Universum	0356
Quartz	0314	Vector	0313
Quelle	0272,0275,0278,0286,0288,0369	Victor	0318,0328,0366
RCA	0349	Video	0313
REX	0273,0292,0319	White	0276,0282
SABA	0270,0273,0279,0292,0295,0318		
	0316	Xenon	0322
Saisho	0286,0287,0322,0332,0356,0360	Others	0350,0351,0352,0353
Salora	0283,0285,0314		

SAT/DSS Codes

AB	0812	Amstrad	0371,0372,0408,0488,0487,0515
Aegir	0514		2014
Akai	0499	Ankara	0373,0511
Alba	0407,0522	Antron	0522
Aldes	0511,0514	Apollo	0402
Alfa Gold	0810,0811	Arion	0510,2003
Allsat	0499,0512	Armstrong	0499
Allison	0511	Asat	0499
AlphaStar	0499,0826	Aston	0498
Amstar	0847	Astra	0372,0409,0488,0520

Astro	0502,0514,0522	Fracarro	0380,0381
ASTRX	0640,0640,0643,0646	Freecom	0428
Audioton	0512,0522	FTE	0399
Aura	0430,0467	Fuba	0413
Barcom	0373	Funtach	0823,0824
Benjamin	0468	Galaxis	0511,0512
BEST	0453	Galaxys	0873
Bigsat	2013	Giacur Recard	0382,0416
Boca	0487	GMI	0521,2019,2020,2021,2022,2023
BSIyB	0880		2024
Bush(UK)	0402	Grandin	0496
Cambridge	0375	Grey	2003
CANAL+	0804	Grundig	0383,0400,0402,0484
Chapparel	0126,0374,0410	Hansaatic	0516
Citycom	0507	Hanuri	0514
CNT	0514	Helicom	0520
Commlink	0511	Hevet	2007
Comtec	0511	Hirschmann	0415
Condor	0520	Hitachi	0483,0828,0829
Conrad	0520	HTS	0827
Cosat	0512	Hughes	0628,0629
Datcom	2005	Humax	0505,2004,2012
Digital	2006	Huth	0421,0478,0511,0512,0520
Dietsrist	0499	HWALIN	0816
DMT	2013	ICX	0417
DNT	0409,0428,0430,0487,0489	International	
Drake	0376,04450446,04470495	ID Digital	2004
DSR	2003	Info	2010
Dynasat	0491,0492	Interstar	2011
Echostar	0377,03780379,0386,0408,0411	Intervision	0512,0520,0523
	0412,04570458,0461,0462,0486	ITN-Nokia	0384,0385,0418
	0800,0827,0855,0862,2008	Jemom	0386
EH Galaxy	0858	Jerrold	0454
Einhell	0497,0511	Johnsson	0387,0512
EISAT	0822	JSR	0386
Electrosat	0870	Kathrein	0388,0389,0390,0419,0468,0499
Elektia	0514		0507,0522
Eta	0499,0512	KR	0522
EMME ESSE	0463,0464,0465	Kyostar	0522
Europa	0499	Lasat	0487,0514,0520
Eurosky	0421,0487,0520	Lenon	0503
Euro Space	0850	Lenco	0423,0428,0480,0481,0482
Eurostar	0465,0513,0520,0872	Lexus	0489
Exalor	0522	Life Sat	0504,0516
Fagor	0512	Lorenzen	0487,0520
Ferguson	2003	Luxor	0384,0391,0392
Finlux	0414,0415	Macab	0420
Force	0836	Macom	0444
Fortec Star	0458,0808,0809,0846,0850,0851	Magnavox	0477,0830,0831
	0852,0853,0854,0855,0857,0859	Manhattan	0512,0514
	0866,0867,0876,0878,0879	Marantz	0489

Max	0520	PSR	0858
M & B	0516	PTT_TELCOM	0515
Mega	0499	Quadral	0511,0523
Meltec	0496,0507,0511,0514,052	Quelle	0383,0520
Metron	0493	Radiola	0499
Mirast	0874	Radix	0499,0420,0430,0487
MINA	0494	Rainbow	0522
Minerva	0383,0400,0484	RCA	0450,0818,0835
Mitsubishi	0489	RC-AK	0486
MME	0217	RFT	0499,0511
Morgans	0421,0487,0489,0512,20	RM(RM2200)	0860
Motorola	2000	Rover	0523
NEC	0422,0478,0493	RTG(SpaceNet)	0846
Neckermann	0421	SABA	0514,0520
Neosat	0845	Sagem	0518
Neotion Box	2007	Sakura	0387,0398
Network	0394	Salora	0391,0418
Neulhaus	0520	Samsung	0459,0475,0476,0801,0877
Neusat	2013	SAT 100	0273,0488
New Star	2015	Sateco	0426
NOKIA	0580,0720,0807	Satcom	0515,0516,0520
Nordmende	0526	Satline	0523
Obitrich	0414	Stapartner	0514,0522
Octagon	0522	Schacke	0522
Openflex	2013	Schwaiger	0516
Openitel	2016	Scientific	0452
Optex	0512	Atlanta	
Opticum	0394,0395,0400,0402,0485,0500	SEG	0516
Pace	0814,0815,2001	Setec	0512
Palcom	0396	SEF	0625,0837,0838,0839
Paldium	0421	Siemens	0383
Palsat	0423	Sigma	2007
Panasonic	0819,0863	Signal	0456,0890,0855
PNational	0473,0832	Sintrack	0427
Panda	0520	Skarlin	0217,2002
Pansat	0455	Sky Box	2007
Philips	0402,0424,0425,0460,0477,0499	Sky Digital	0880,0881
	0507,0518,0522,0803,0830,0831	Skymaster	0470,0511,0513,0516,0517,0523
	0841		0825,0882,0883
Phonotrend	0511,0512	Slymax	0489
Pioneer	0474	Sony	0497,0834
Polosat	2009,2017	Star	0459,0470,0802,0846,0868,0871
Premier	0497		0875
Premior	0802	Strong	0399,0423,0426,0480,0492,0508
Premium X	0501	STS	0393
Primestat	0454	STV	0413
Prostat	0405,0451,0479,0511,0523	Sun Moon Star	0813
	0504	Sunstar	0487

Maspro	0388,0393,0402,0490	Provision	0514
Super Max	0646,0848,0849,0850	Triumph	0506
Supex	0838,0862,0869	Trwam	2005
Tadiran	0817	Unbranded	0481
Tagra	0512	Uniden	0403,0404,0406,0443,0830,0831
Tantec	0396	Unisat	0499
Technisat	0409,0428,0429,0430,0431,0487,0499,0418	United Satellite	0440
Technosat	0263,0467,0802,0869	Universum	0520
Technoswell	0520	US Electronics	0417
Tedalex	0466	Victor	0430,0487
Teknika	0471	Vonata	0499
Telasat	0516	Viewstar	0477
Telesiel	0522	Vision	0519
Telecom	0884	Vortec	0459,0801,0855
Teletika	0522	Vortic Star	0801
Telemaster	0514	Vtech	0434,0507
Telemax	0432	Wela	0497
Telemisler	0398,0409,0420,0430,0469,0487	Wetekom	0516
Teletech	0515	Wintegarten	0511
Telewire	0512	WISI	0409,0420,0435,0436,0437,0438
Thomson	0520,2009,2017	Witec	0439
Thorn-Ferguson	0394,0395,0400,0401,0402,0433,0485	Woorisat	0514
		XSAT	0500
Tokai	0499	Zehnder	0390,0507,0514
Tonna	0512	Zenith	0441,0444,0445,0446,0447
Topfield	0509	Zimwell	0821
Toshiba	0442,0444,0506,0833	Zodiac	0522
TPS	0805	Others	0820,0861

CABLE Codes

ABC	0452	Paragon	0806
Jerrold	0417	TADA	0448

HIFI Codes

Blaupunkt	0568	Pioneer	0545
Fisher	0529	Sanyo	0539
Hitachi	0530	Sharp	0551
Kenwood	0527,0531,0532,0533,0534	Sherwood	0540,0541,0577,0578
Lenco	0585,0596,0597,0598,0599,0600,0601	Sikardin	0644
		Sony	0617
Nordmende	0535,0549	Technics	0542
Onkyo	0536,0537	Yamaha	0543,0544
Panasonic	0538		
National			

CD Codes

Aiwa	0581	Phillips	0552,0553,0579,0604
ATLE	0579	Pioneer	0554,0555,0610
Denon	0547	Proton	0553
Fisher	0546	Radiotone	0549
Hatai	0548	ROTEL	0553,0582,0583
Inkei	0541	SAE	0553
JBL	0623,0624	Sansui	0603
JVC	0605	Sanyo	0604,0606
Karcher	0549	Sharp	0550,0566
Kenwood	0550,0580	Sony	0556,0557,0575,0607
Lenco	0600,0546,0585,0586,0587,0588,0589,0590,0591,0592,0593,0594	Sylvania	0553,0604
Magnavox	0553,0576,0604	Teac	0608,0611
Mission	0553	Technics	0558,0609
NEC	0551	Victor	0605
Onkyo	0613,0614,0615,0616	Yamaha	0612

LDDVD Codes

Alfrey	0688	Elypio	3000
Aiwa	0626,0649	Encore	0688
Alba	0680	Enzer	0684
AMC	0643	Ferguson	0679
APEX	0672	Goldstar	0633,0882
Arianet	0654	Grundig	0655,0686
ATLM	0627,0671	Harman/Kardon	0690
BBK	3003,3004,3005,3006,3007,3008,3009	Hitechi	0684
		JMB	0686
Bentley	0635	JVC	0636,0664,3012
BSkyB	0680	Kenwood	0572,0630,0663
Bush(UK)	0680,0685,0689	Kiss	0684,3015
Caravell	0622	Lenco	0689
CineULTRA	0689	Lecon	0687
CONIC	0673	LG	0682
Daewoo	0660,3013	Logik	0669
Denca	0685	Magnavox	0571
Denver	0689	Manta	3011
Denzel	0684	Matsui	0683,0686
Desay	0625	Maxview	0670
Diamond	0683	M & B	0670
Dual	0684	Microsoft	0619,0620
Eltax	0642	Mitsubishi	0682

Monya	0684	SEG	0684
Mullek	0638	Sharp	0628,3010
Neufunk	0684	Skymaster	0656
Onkyo	0647,0653	Sokol	0645
Orion	0686,3010	Sony	0575,0631,0632,0641,0657
Oriron	0683	Talung	0659
Pacific	0676,0677,0678,0679	Teac	0634
Panasonic	0573,0574,0629,0639	Telestar	0651
National		Tevion	0683
Philips	0559,0675	Thomson	0668
Phonotrend	0689	Tokai	0684
Pioneer	0571,0658	Toshiba	0571,0640
Ralte	0684	Universum	0682
RCA	0602,0661,0667	Wesder	0689
REC	0685	Wharfedale	0687
Red Star	0630,0652	Wilson	3014
Roadstar	0685,0689	Xoro	3017
Sampo	0688	Yakumo	3018
Samsung	0637,0648,0666	Yamaha	0646
Sansui	0686	Yamakawa	0684,3016
Sanyo	0681	Zenith	0670,0682
Schneider	0679	Others	0674
Schwaiger	0679		

BBK	3001,3002	Philips	0560(EQ)
Blaupunkt	0569(WHS)		0561(PP)
Cabletime	0524,0525,0526(CRV)		0562(MPE)
Denon	0564(TUNE)		0565(TONE)
	0569(DECK)	ROTEL	0567(DCC)
Microsoft	0621(WCE)	Sony	0584(MPE)
			0583(MPE)
			0575(CDV)
			0618(TONE)

Customer Helpline

01473 292 862

Monday to Friday 9:00am-12:30pm
& 1:30pm-5:00pm

Supalec reserve the right to change specifications without prior notice.
Pictures for illustration purposes only.
Actual products may differ slightly.

