



4-CHANNEL LIGHT SEQUENCER

Ref. No. 150.298



INSTALLATION:

For safety please observe the following information.

The pulsing disco lighting is designed to operate on AC mains supply between 220 and 240 volts, 50Hz. The wires in the mains lead are coloured in accordance with the following code:

GREEN and YELLOW	=	EARTH
BLUE	=	NEUTRAL
BROWN	=	LIVE

Suitable for indoor use only. This appliance must be earthed.

OPERATION:

This disco light has four lamp circuits. The lamps are arranged in four different colours, yellow, blue, red and green. They provide a random flash effect dependent upon the rhythmic characteristics of the local sounds. A direct audio connection is not required as there is an inbuilt acoustic detector. By turning the sensitivity control on the rear of the unit clockwise, the audio gain to the unit is increased.

The unit has a support bracket which can be rotated to adjust the mounting angle. The bracket enables the unit to be fastened to a wall or ceiling, or alternatively folded underneath the light unit in which case it is free standing. Care must be taken if the unit is stood on its base. The bulbs become very hot during use and should be directed away from any flammable surfaces. It is not advised to use the unit on any surfaces susceptible to heat.

LAMP REPLACEMENT

It is important that the equipment is disconnected from the mains and that the lamps are cool before replacing any defective lamps. The lamps are 240 volt, 60 watts ES.
UNDER NO CIRCUMSTANCES SHOULD THE WATTAGE OF ANY LAMP EXCEED 60 WATTS.

CAUTION: High voltages exist inside this unit. Do not remove the cover as there are no user serviceable parts inside. Return to your retailer or a qualified technician. Always disconnect from the mains supply when not in use.