

'59 Bassguy

Overdrive Owner's Manual

NUX
Reissue Series

The NUX '59 Bassguy Overdrive, part of the Reissue Series, captures the legendary tone of the Fender '59 Bassman in a compact, pedalboard-friendly box. Featuring a "JUMP" toggle switch to simulate the amp's iconic channel 'Jumpering'. Experience authentic vintage tones with two tonal options to spark your creativity.

Features

- Legendary Fender '59 Bassman amplifier.
- Classic knobs and panel design.
- Jump toggle, Normal and Bright channel 'Jumpering' simulation.
- 100% Analog circuit.
- True bypass.

Specifications


- Input impedance: 1M Ohms
- Output impedance: 820 Ohms
- Power: 9V battery or external 9V adaptor delivering regulated minimum 200mA (DC 9V $\ominus \rightarrow \oplus$)
- Dimensions: 121(L) x 77(w) x 48(D) mm
- Weight: 250g

* All of the brand and model names mentioned on this page are Trademarks of their respective owners, which are in no way associated or affiliated with NUX Effects and Cherub Technology Co.,Ltd.

1. Do not place near heat sources, such as radiators, heat registers, or appliances which produce heat.
2. Guard against objects or liquids entering the enclosure.
3. Refer all servicing to qualified service personnel.
4. Prolonged listening at high volume levels may cause irreparable hearing loss and/or damage. Always be sure to practice "safe listening".

Follow all instructions and heed all warnings
KEEP THESE INSTRUCTIONS!

Product Interface

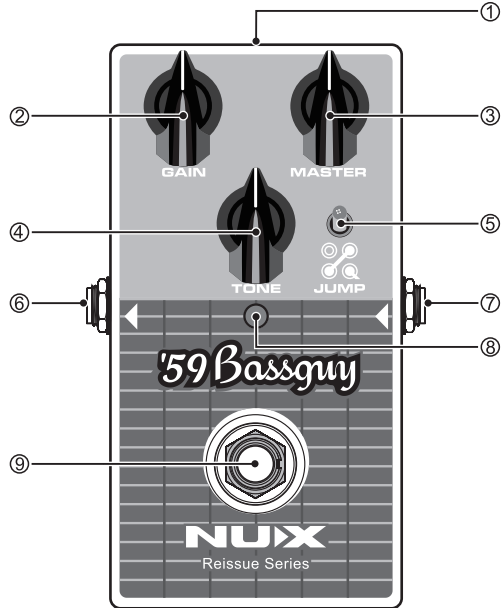

1. POWER Jack

Use a regular 9V adaptor with Negative Tip to power this pedal. It's highly recommended using the optional NUX ACD-006A adaptor. Using an incompatible adaptor may cause noise or malfunction.

2. GAIN Knob

Sets the gain level of the input signal.

3. MASTER Knob

Sets the output level of this pedal.

4. TONE Knob

Sets the treble of the signal. Adjusting the brightness of the tone.

5. JUMP Toggle Switch

Faithfully simulating the iconic channel 'Jumpering' of the Fender '59 Bassman, offering two distinct tone options:

- Downward Position: Transparent drive sound.
- Upward Position: Brighter tone with enhanced treble.

6. OUTPUT Jack

Connect an amplifier into this jack.

7. INPUT Jack

Connect the guitar to this jack. Plugging in this jack switch on the power whether the effect is engaged or disengaged. When not using this pedal, disconnect the cable from this jack to save battery life.


8. LED Indicator

Display pedal working status.

9. Footswitch

Engage / Disengage the effect.

Installing The Battery

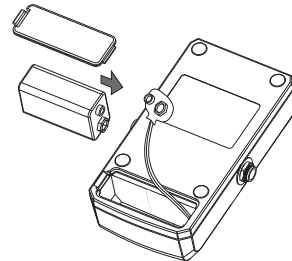

A 9V battery is included in the product packaging. Please replace the battery if any of the following occurs:

- 1.The indicator light dims or fails to light up.
- 2.The effect sound becomes weak or heavily distorted.

Please connect the snap cord to the battery and insert the battery as shown in the drawing below.

Accessories

- 9V battery ●Owner's manual ●Warranty card ●NUX sticker

*Specifications and features are subject to change without notice.

WARNING!-IMPORTANT SAFETY INSTRUCTIONS BEFORE CONNECTING, READ INSTRUCTIONS

WARNING: To reduce the risk of fire or electric shock, do not expose this appliance to rain or moisture.



The lightning symbol within a triangle means "electrical caution!" It indicates the presence of information about operating voltage and potential risks of electrical shock.

CAUTION: To reduce the risk of fire or electric shock, do not remove screws. No user-serviceable parts inside. Refer servicing to qualified service personnel.



The exclamation point within a triangle means "caution!" Please read the information next to all caution signs.



www.nuxaudio.com
Made in China