

Item ref: 173.262UK

CCT-1 Clip Tuner




Version 1.1


Features

- **Auto Power off Function:** The device will turn off automatically if there is no signal present or operation in 5 minutes.
- **Tuning Modes:** Chromatic, Guitar, Bass, Violin, Ukulele C, Ukulele D.
- **Settings saved upon powering off**

Product Description

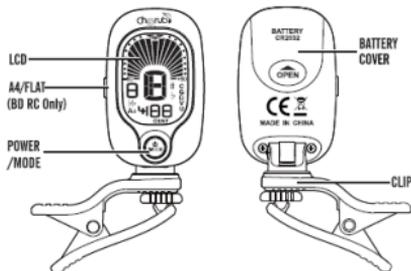

When the battery charge is low, the LCD will become dim. Please replace the battery as soon as possible.

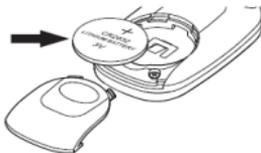

- NOTE:**
1. Pay attention to polarity when replacing battery.
 2. Remove the battery if the product will not be used for a long period.

Operation

1. Press **POWER/MODE** for 2 seconds to turn on/off. The CCT-2046BD will turn on to the last setting. The default tuning mode is Chromatic when first powering on this tuner.
2. Press **A4/FLAT** briefly to set A4: 430~450HZ
3. Press **A4/FLAT** for 2 seconds to set flat tuning.
4. Press **POWER/MODE** briefly to set mode: C(chromatic), G(Guitar), B(Bass), V(Violin), U- U-D(Ukulele D).

Specifications

- Tuning scale: Chromatic, Guitar, Bass, Violin, Ukulele C, Ukulele D.
- Tuning range: A0-C8
- A4 Frequency: 440Hz
- Tuning stability: ± 1 cent
- Power: 3V (CR2032 lithium battery).



Disposal: The "Crossed Wheelie Bin" symbol on the product means that the product is classed as Electrical or Electronic equipment and should not be disposed with other household or commercial waste at the end of its useful life. The goods must be disposed of according to your local council guidelines.