



## Wireless Power Bank with Fast Charging

AVWPB10

Item ref: 421.777UK

User Manual


Charge compatible devices wirelessly and on-the-go with a portable, wireless power bank. Simply place your device on the power bank to enable the wireless charge function. You can also charge your device using a USB and USB Type-C lead for simultaneous fast charging. The compact, robust design comes with handy LED indicators and is light enough to take anywhere with you.

- Supports fast wireless charging for Samsung 10W and iPhone 7.5W (compatible mains adaptor required)
- 5W Universal Qi charging mode for other wireless devices
- USB-QC3.0 and USB Type-C PD outputs for simultaneous fast charging of compatible devices
- Tough rubberized finish
- LED charging and power indicators

### Technical Specifications

Power input	5V 2A (USB); 5V 3A (USB Type-C)
USB output current	up to 3000mAh (USB and USB Type-C)
Output	10W, 7.5W & 5W (wireless)
Battery type	Polymer
Dimensions	148 x 73 x 16.5mm
Weight	250g

### Features

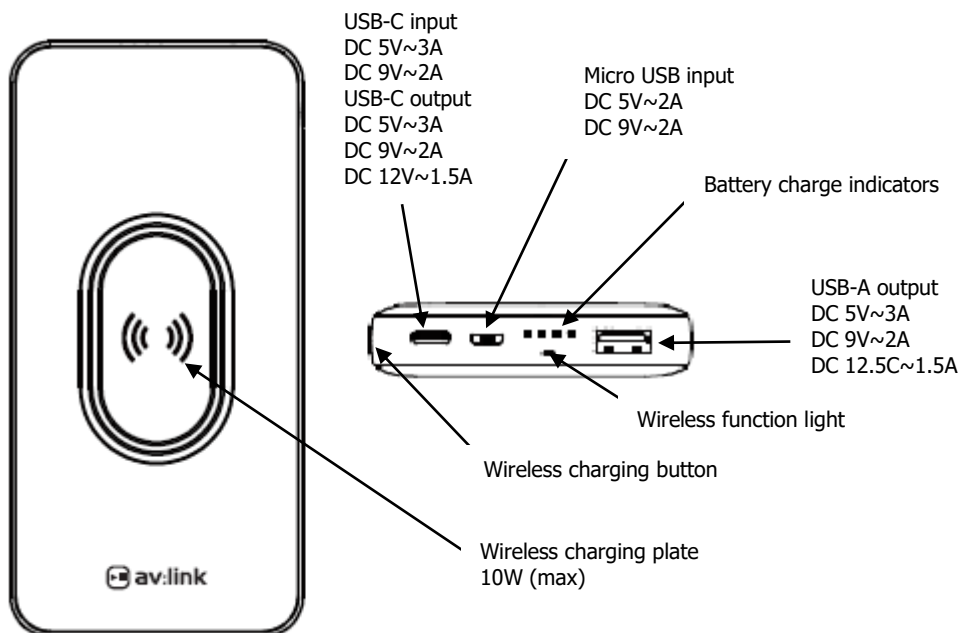


### Charging the power bank:

- **Note:** always fully charge the power bank before first use. This unit requires 3 to 4 full drains and recharges before working to its optimum performance.
- When not used over long periods always recharge the unit every 3 months.
- To charge the unit, first insert the USB-A plug end of the charging lead into a USB port on either a PC or laptop, or a certified USB power supply.
- Next insert the USB-C plug end of the charging lead into the USB-C charging port on the power bank.
- The 4 battery charge indicators (25%, 50%, 75% and 100%) on the power bank will light up and show the current charge level of the unit and the corresponding level light will flash to indicate the unit is charging.
- When the unit is fully charged all 4 of the battery charge indicators will stay lit.
- To view the current charging status of the power bank at any time, press the wireless charging button on the side of the unit.

### Charging your device wirelessly:

- Press the wireless charging button on the side of the unit and the wireless function light will flash 3 times, then light up green to indicate the wireless charging function is enabled.

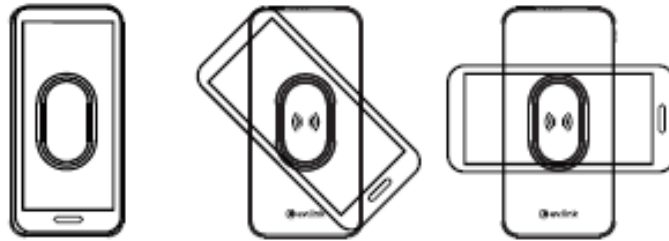

- Place your device on top of the wireless charging plate, ensuring the centre of your device is located on the centre of the plate at any angle (see above)
- When charging is taking place the wireless function light will flash green and the battery charge indicators will show the charging level of the unit.
- If an incompatible device is placed on the charging plate the wireless function light will illuminate red and stop the wireless charging function immediately to avoid damage to either your device or the power bank.
- This unit can be used to charge wirelessly all compatible Android and iOS devices at either 10W, 7.5W or 5W depending on its charging capacity.

### Charging your device using a charging lead:

- **Note:** always check the voltage compatibility of your device before connecting to the power bank.
- Insert the device's regular USB charging lead into either the USB-A or USB-C ports on the power bank.
- Connect the device to the other end of the lead and check the display on the device to ensure charging is taking place.
- When charging is complete always disconnect your device and the charging lead from the power bank.
- This unit can be used to charge all Android and iOS devices when using the recommended charging lead supplied with the device.

### In the box:

- Wireless power bank
- USB charging lead
- User guide

### Safety warnings:

- Improper use may result in product damage, decreased battery life and loss of charging capacity not covered by the manufacturer's warranty.
- Always check the device voltage for compatibility before use.
- Only charge the unit from a PC, laptop or certified USB power supply.
- Do not store the power bank in high or low temperature environments or enclosed areas without ventilation.
- Never drop, throw or subject the unit to excessive force as this may damage its internal components.
- If the unit becomes excessively hot, emits an odour, occurs body damage or becomes deformed in any way stop using it immediately.
- Never use any harsh chemicals or cleaning agents on the exterior of the unit.

### Safety Disclaimer



Do not attempt to service this product yourself as opening or removing covers may result in fire, electric shock or equipment damage and will also invalidate the warranty. This product is only designed for indoor use and must be kept away from water and high humidity along with high temperatures and direct sunlight.

This product is classed as Electrical or Electronic equipment and should not be disposed with other household or commercial waste at the end of its useful life. The goods must be disposed of according to your local council guidelines.

