### @mercury



Item ref: 600.106UK

## TSL01 Digital Sound Level Decibel Meter

**User Manual** 






# Please read this manual thoroughly and ensure all contents are fully understood before using the apparatus.



This device is designed to measure the sound level in the environment and Complies with EN61326-1:2013 standard. It is suitable for monitoring background noise to ensure health and safety standards and safety requirements are met.


#### Layout:

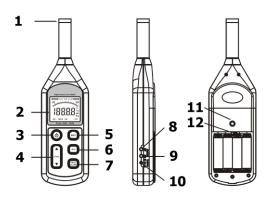

- Condenser Mic
- 2. LCD display
- 3. On/Off switch
- 4. Level range setting control
- 5. Max value hold switch
- 6. Sensitivity weight setting

- 7. Time weight setting
- 8. A/C output
- 9. D/C output
- 10. 6Vdc power input
- 11. Tripod mount
- 12. Calibration control

### **LCD Screen Display:**

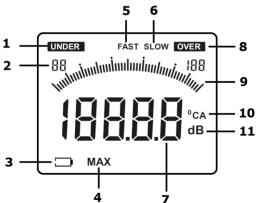

- 1. Under; Indicates current sound level is below selected range.
- Selected sound level range; Press level button to choose 30-80dB, 50-100dB, 60-110dB, 80-130dB or 30-130dB.
- 3. Low battery indicator; Please replace the batteries before use.
- Max value hold display; Toggle on/off by pressing max button, when function is on it will display only the highest recorded value since the function was activated.
- 5. Fast time weighting; Sampling at 125ms interval.
- 6. Slow time weighting; Sampling at 1sec interval.
- 7. Sound measurement reading.
- 8. Over; Indicates current sound level is above selected range.
- 9. Live barograph display.
- Sensitivity setting display; Change by pressing A/C button. A is more sensitive to general noise, C is more sensitive to low frequency noise.
- 11. Measurement unit dB.



#### Operation:

This unit is not suitable for use above 2000m sea level. Humidity in the testing environment should be less than 80%RH temperature 0-40°C.

- Switch on the unit.
- Select desired range ideally UNDER and OVER should not be displayed.
- Select sensitivity weight, for general noise use A, for low frequency noise use C.
- For measuring short burst noise set the time weight to fast, for normal background noise use slow.
- For monitoring peak noise level, press the Max button, only the highest on record will be displayed.

#### Calibration:

All units are calibrated from the factory however we recommend the device is recalibrated at least once a year. To calibrate, insert the mic into the acoustic calibrator. Set the Sensitivity weight to A, time weight to fast and range to 60-110dB. After the calibrator is on, use a fine flat bladed screwdriver to adjust the potentiometer on top of the battery compartment until 94dB is displayed.

#### Accessories:

- Instruction manual
- Heavy duty protective case
- 4 x AA batteries
- 1 x Foam windshield



#### Specification:

30-130dBA, 35-135dBC Range

Accuracy +/-1.5dB (under reference condition)

31.5Hz - 8.5kHz Frequency Range

30-80, 50-100, 60-110, 80-130, 30-130dB Level Range

Linearity Range 50dB/100dB

Frequency Weight A/C

Resolution 0.1dB, 4 digits display

Time Weight Fast/Slow 0.5s/1s sampling rate 1/2" Flectret Condenser Mic Microphone Power 4 x AA Battery or 6V dc PSU

Battery Life 30 hours (using alkaline AA batteries)

Operation condition -0-40°C, 70-80%RH Storage condition -10-60°, 10-80%RH Weight 308g (including batteries)

256 x 70 x 35mm Dimension



This product is classed as Electrical or Electronic equipment and should not be disposed with other household or commercial waste at the end of its useful life. The goods must be disposed of according to your local council guidelines.

#### Errors and omissions excepted.

Copyright@ 2021 AVSL Group Ltd, Unit 2 Bridgewater Park, Taylor Road, Trafford Park, Manchester. M41 7JQ.

AVSL (Europe) Ltd, Unit 3D North Point House, North Point Bus. Park, New Mallow Road, Cork, Ireland.